



BAR888 QUICK START GUIDE

The **BAR888** will automatically synchronize the current time, date, month, and year **when brought within an approximate 1500km radius of the radio signal generated from Frankfurt Germany (DCF77)**. Please allow up to 72 hours for the time to set. To speed up the time setting process, place the unit by a window or set it outside for at least 10 minutes.

1. Setting Up the Main Unit and Activating the Radio Controlled Clock

- Lift the stand on the back of the unit.
- Insert 4 x AA batteries
- Set the temperature unit to °C or °F degrees.

NOTE If there is a clear plastic tab in the battery compartment, please remove it before installing the batteries.




2. Remote Sensor Set up

- Remove the back cover using a small Phillips screwdriver.
- Insert 2 x AA batteries
- Select a channel then press **RESET**.
- Replace the cover.
- Set the sensor outdoors, preferably mounted on an outside wall.

3. Setting the Time and Date Manually


- Press and hold **MODE** until the hour digits blink.
- Press **+ or -** on the back of the unit to **increase or decrease** the time.
- Once hour is set, press **MODE**. The Minute digits will blink.
- Press **+ or -** to set the minutes.
- Repeat Steps C - D to set the year, month, day and display language.

4. Setting the Alarm

- Press and hold **24hr**  **OFF** until the hour digits blink.
- Set the hour by pressing **+ or -** on the back of the unit, then press **24hr**  **OFF** to confirm.
- Set the minutes by pressing **+ or -** on the back of the unit.
- Press **24 hr**  **OFF** to confirm and exit alarm settings.

5. Turning the Alarm ON / OFF

Press  **ON / OFF** to to turn the alarm on or off.

- The  icon indicates that the alarm is on.
- No icon is shown when the alarm is off.