



USER'S MANUAL  
MANUEL D'UTILISATION  
BEDIENUNGSANLEITUNG  
MANUAL PER L'USO  
MANUAL -  
DE INSTRUCCIONES



OREGON  
SCIENTIFIC

---

086-002016-047



TOUCH-SCREEN DATABANK  
USER'S MANUAL

MODEL PDA283

ENGLISH

TABLE OF CONTENTS

**Introduction**.....3  
**Description of Parts**.....4  
**Description of the Main-Menu-Display Icons**.....5  
**Inserting the Batteries**.....6  
**Self Initialization**.....7  
**Getting Started**.....7  
    The Easy-Touch Pencil.....7  
**System Setup**.....8  
    Key Tones.....8  
    Display Contrast Control.....9  
    Security Access.....10  
    Deleting Records.....11  
    PC Link.....11  
**The Phonebook Mode**.....12  
    Categories .....12  
    Inserting A New Record.....13  
    Browsing Phonebook Records.....14  
    Viewing or Editing Existing Phonebook Records.....14  
    Search.....15  
    Lock .....15  
**Notepad Mode**.....17  
    Inserting a New Note.....17  
**Bookmark Mode**.....18  
    Inserting a Web Site Address.....18

<b>Time / Date Mode</b> .....	18
Choosing a Home City.....	19
To Enter or Edit the Home Date and Time.....	19
Daily Alarm.....	20
Finding The Time Of Cities Around The World.....	20
<b>Calculator Mode</b> .....	21
Numerical Calculations.....	21
Metric Conversions.....	21
Currency Conversions.....	22
<b>Calendar Mode</b> .....	23
Viewing Past or Future Dates.....	23
Daily Scheduler.....	24
Erasing Past Schedules.....	25
Anniversary Lists and Holiday Lists.....	25
<b>Translator Mode</b> .....	26
<b>Help Mode</b> .....	27
<b>Reset</b> .....	28
<b>Maintenance</b> .....	28
<b>Specifications</b> .....	28

## INTRODUCTION

Congratulations on your purchase of the Touch-Screen Databank (PD283). A multi-function device, this product provides seven primary functions.

### **A Phonebook**

Stores individual names, phone numbers, addresses, and other information in twelve text-field categories.

### **A Notepad**

Stores message information and important need-to-remember notes.

### **A Bookmark**

Stores Web Site addresses and related information.

### **A Time / Date Clock**

A current-date calendar, local-time clock, and world-time clock for 84 major cities around the world.

### **A Calculator**

A 10 digit numerical calculator with metric and currency conversion functions.

### **A Calendar and Daily Scheduler**

A daily planner and scheduler that highlights important dates or specific blocks of time.

### **A Translator**

Translates over 9,500 words into seven different languages. Translates into: English, French, German, Spanish, Italian, Portuguese, and Dutch.


Using touch-screen technology, primary functions can be accessed in one step.





 
 
 


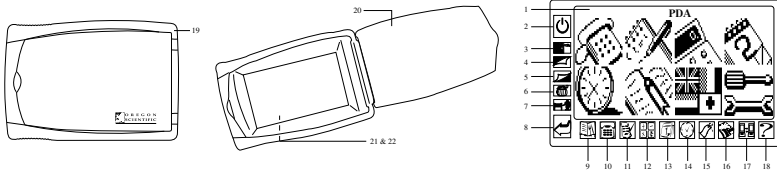

 
Unlike conventional databanks that utilize extensive keyboards, your PDA283 simplifies data input. Using an Easy-Touch Pencil, functional sequences are fast and simple to follow. Large easy-to-read display icons enhance the product's user friendliness.

Another feature of your PDA283 is its PC connective capabilities. With an additional extension and special software (sold separately), data can be transferred and safely stored on a computer terminal.

As a final note, take time to read this manual. Understanding the many features of your PDA283 should increase the unit's usefulness and help to avoid mistakes that may otherwise result in lost data.

## DESCRPTION OF PARTS



1. **Liquid Crystal Display (LCD) and Easy-Touch Display Buttons**
  - Large Touch-Screen Display with easy-to-read icons
  - Touch-sensitive functional buttons
2. [  ] **On/Off Button**  
Activates and deactivates the unit
3. [  ] **Escape Button**  
Exits to the previous display
4. [  ] **Page-Up Button**  
Scrolls upwards through records
5. [  ] **Page-Down Button**  
Scrolls downwards through records
6. [  ] **Delete Button**  
Erases information
7. [  ] **Edit Button**  
Edits records or specific text fields
8. [  ] **Enter Button**
  - Confirms a record entry
  - Exits to a previous display
9. [  ] **Menu Button**  
Access to Main Menu Display
10. [  ] **Phonebook Button**  
Access to Phonebook Mode
11. [  ] **Notepad Button**  
Access to Notebook Mode
12. [  ] **Calculator Button**  
Access to Calculator Mode
13. [  ] **Calendar Button**  
Access to Calendar Mode

14. [🕒] **Clock Button**  
Access to Clock Mode
15. [🔖] **Bookmark Button**  
Access to Bookmark Mode
16. [🗣️] **Translator Button**  
Access to Translator Mode
17. [📱] **PC-Link Button**  
Access to data tranfer
18. [?] **Help Mode**  
Access to help
19. **Touch-Screen Pencil**  
For use when making selections
20. **Front Cover**  
Provides protection to the unit and LCD
21. **Battery Compartment**  
Main: Houses 2 (two) CR2032 3V lithium cells  
Backup: Houses 1 (one) CR1220 3V lithium cell
22. **Reset Button**  
Clears all information and resets the unit to its original factory values

## DESCRIPTION OF MAIN MENU DISPLAY ICONS

The Main Menu Display has eight (8) icons



Phonebook



Notepad



Calcuator



Calendar



Clock



Bookmark



Translator



Setup


## INSERTING THE BATTERIES

This unit is designed to have a main source of power and a backup source. The backup power source functions to provide power while the main batteries are being replaced.

The PDA283 uses two (2) CR2032 3V lithium cells for the main power source, and one (1) CR1220 3V lithium cell as a backup source.

### To install batteries:

1. Gently pull to open the battery compartment door.

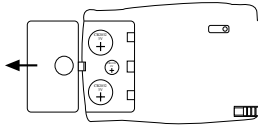

2. Insert 2 (two) new CR2032 lithium cells for the main power and 1 (one) CR1220 lithium cell for the backup battery into the appropriate locations.
3. Replace the battery compartment door.



If not disposed of properly, batteries can be harmful. Protect the environment by taking exhausted batteries to authorized disposal stations.

Replace batteries when they are low. A Low Battery message will show to inform the user that the batteries need replacing.

**Note:** Generally the backup battery will not require replacing. When the Low Battery warning message appears, replace the main batteries.

Low Battery !!

Exit by 'ESC'




## SELF INITIALIZATION

Once the batteries are inserted, the unit will activate. When replacing batteries, the user will be asked to initialize the unit.

**Warning: Initializing the unit will erase all information. To keep stored information do not initialize the unit.**

**To keep stored information after replacing batteries:**

1. Use the Easy-Touch Pencil and gently touch [N] two times. The unit will keep stored information and advance to the Main Menu Display.

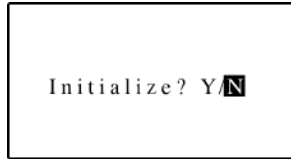


## GETTING STARTED

### THE EASY-TOUCH PENCIL


Use the Easy-Touch Pencil to enter information or to select a particular function. Taking the pencil from its storage compartment in the upper corner of the unit, gently touch the desired locations on the display.

**To start the unit:**


1. Open the front cover.
2. Use the Easy-Touch Pencil to touch [  ] On / Off.

**Note:** When the unit is activated, it will enter the last display of use when previously operated.

**To enter the Main Menu Display:**

1. Touch [  ] Menu.

**To deactivate the unit:**


1. Touch [  ] On / Off.


**Note:** Left untouched for about four (4) minutes, the unit's power-conserve feature will automatically deactivate the unit.


 

## SYSTEM SETUP

Initially take a few minutes to personalize the system. Properly setting up the system before use will improve functionality. Enter any of five categories: Keytone, Contrast Level, Change Password, Delete Records, or PC Link, and enter the appropriate information.

### To access System Setup:

1. In the Main Menu Display, touch [  ] System Setup. A pop-down box will show the five categories of System Setup.

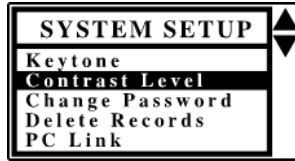
 


2. Touch the desired category to highlight it or touch [  ] or [  ] to move upwards or downwards through the pop-down box.
3. Touch the highlighted category or [  ] Enter to access the selection.

## KEY TONES

When the key tone function is active, a beep sound can be heard as the Easy-Touch Pencil touches the LCD. The “beep” sound tells the user that the pen has properly contacted with the panel.

### To activate the Key Tones:



1. Enter System Setup and then touch [Keytone].
2. Touch [Keytone on] or touch the [  ] or [  ] to alternate between turning the key tone on and off.

To operate the unit without key tones, the key tone function needs to be deactivated.


### To deactivate Key Tones:

Touch [Keytone off] or touch the [  ] or [  ] to alternate between turning the key tone on and off.

**To return to System Setup:**


1. Touch [  ] Escape or [  ] Enter and return to System Setup.

**Note:** Main Menu Display functions can be accessed at any time.

To return to the Main Menu Display or any of the seven primary Data Bank functions, touch the respective icon. The unit will enter that display. For example: to return to the Main Menu Display, touch [  ] Menu, the unit will instantly enter the Main Menu Display.

**DISPLAY CONTRAST CONTROL**



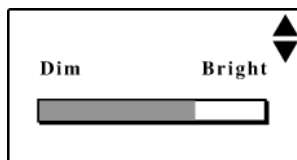

The amount of dark / light contrast on the display can be adjusted with the Contrast Control.



Moving the contrast bar to the extreme right, the LCD will become quite dark and the screen icons and characters will be difficult to read. Moving the bar to the extreme left, the screen becomes quite light. In this position, display icons and characters may also become difficult to read.

For best display contrast, position the contrast bar close to the center.

**To alter the amount of Dark / Light contrast:**

1. Enter Contrast Level in System Setup.
2. Touch the contrast bar on either the left or right side or touch [  ] or [  ] to alter the contrast level.
3. When the desired amount of display contrast is achieved, touch [  ] Enter or [  ] Escape to exit.

**Note:** The user can also complete a selection by touching the contrast bar to select the desired dark / light level and then touching the same location on the bar a second time.

**IMPORTANT**

If by accident the user exits the Contrast Display while the contrast bar is positioned at either the extreme right or the extreme left, it may be difficult to relocate the Contrast Display.

**To locate the Contrast Controls when the display is too dark or too light to read display information:**

1. With the unit turned on, press RESET button. The unit will return to a factory set contrast level. The unit will advance to the Self-Initialization Display.
2. Using the Easy-Touch Pencil, **press “N”**. This will save all stored information and allow the user to enter the Contrast Control Display to alter the display contrast to the desired level.

**Note:** In the Self-Initialization Display, only touch “Y” to initialize the unit.

**When “Y” is touched, all stored information will be permanently lost.**

**SECURITY ACCESS**

To limit access to information, use System Setup to enter or change a password that is entered, it is used to access locked information. A password can be any combination of numbers or letters to a total of eight (8) characters.

Once a password has been selected, it needs to be entered before accessing locked information or changing to another password.

**IMPORTANT**


Do not forget a password. If a password is lost or forgotten, locked information can not be accessed. To prevent losing information, memorize or store a password in safe place.

**To input a password:**


1. Enter System Setup and touch [Change Password].
2. If no password is currently in use, enter a new password by touching the Key Map Display on the desired letters or numbers.




**Note:** For more information on how to use the Key Map Display, refer to the section Insert A New Record located in the Phonebook section of this manual.

3. Touch [  ] Enter.
4. Touch [confirm!] to accept or [cancel!] to reject the new selection.

**To change a password:**

1. Enter System Setup and touch [Change Password].
2. Input the old password.
3. Touch [  ] Enter to terminate the old password.

 

**Note:** The unit will attempt to match the entered password with the current stored password. When a match is made, “Enter New Password” will display and the user can input a new password.

4. Input the new password.
5. Touch [  ] Enter.
6. Touch [confirm!] to accept or [cancel!] to reject the new selection.

## DELETING RECORDS

The entire contents of a category can be deleted in one step.


 
**To delete all the records of a category:**

1. Enter System Setup and touch [Delete Records].
2. Touch [Delete Records] again to enter the 5 categories of Delete Records.
3. Touch one of the 5 categories to highlight it or touch [ ▲ ] or [ ▼ ] to move upwards or downwards through the pop-down box.
4. Touch the selection or [  ] Enter.
5. Touch [confirm!] to accept or [cancel!] to reject the selection.
6. Touch [  ]Escape to return to the System Setup Display.


## PC LINK

This unit is designed to communicate with personal computers (PC). Saving records on a PC can help to prevent accidental loss of information.

To link the PD283 to a PC:

1. Enter System Setup and touch [PC Link].
2. Touch [PC Link] again or [  ] Enter.
3. Touch [Transmit] or [Receive] from the pop-down box.
4. Touch the highlighted bar or [  ] Enter to confirm the selection.

**Note:** A link cable and Software, sold separately, are required for the PC Link.


If the user does not have the proper accessories, touch [  ] Escape to exit PC Link.

**Remark:** According to the version number this function will be upgraded to a PC Sync function. To access this function, user must follow the operations in PC Software manual. This Software may be sold separately.

## THE PHONEBOOK MODE

The phonebook is where names, telephone numbers, addresses, and other pertinent information related to an individual is kept. A sequence of steps will direct the user to input the appropriate information in a particular field.

### To enter Phonebook Mode:

1. In the Main Menu Display, touch [  ] Phonebook



The Phonebook Display has 4 subsections. Each subsection is represented with an icon.





- |  |  |
|--|--|
| 1: [  ] Category Icon | 2: [  ] Lock Icon   |
| 3: [  ] Insert Icon   | 4: [  ] Search Icon |


### To enter one of the phonebook's four (4) subsections:

1. Touch the appropriate icon.

 
 


### [ ] CATEGORIES

Categories further divides a Phonebook list into smaller subdirectories.

The subdirectories are: [  ] All, [  ] Business, [  ] Friend, and [  ] Others

**Note:** By default, after Phonebook is selected the unit will enter the [  ] All category.

**To select a subdirectory:**

1. Enter Phonebook Display and touch [  ] Categories to view a pop-down box with the name and icon of the four subdirectories.
2. Touch one of the four subdirectories to highlight it or touch [  ] or [  ] to move upwards or downwards through the pop-down box.
3. Touch the highlighted subdirectory or touch [  ] Enter to accept the choice.

If there is no record for the selected subdirectory, No Record will display on the LCD.




### [ ] INSERT A NEW RECORD

The Phonebook contains twelve text fields for which information can be stored. Input information into desired fields.


The fields are: Name, Telephone Number, Home Address, Company Name, Company Telephone Number, Company Address, Company Fax Number, Email Address, Mobile Phone Number, Job Title, Birthday, and Remark.


**To insert a new record:**

1. Touch [  ] Insert to enter Name Edit Field.




 

**Note:** The Name Edit Field has three keyboard maps, each with a specific use.



Touch [  ], to toggle between small letters and capital letters.

Touch [  ], before entering numerical digits.

2. Touch the desired Key Map letters.

**Note:** The unit will use the most suitable key map display as the default key map display for each field.




3. Touch  Enter to access Telephone Number Edit field.
4. Input the telephone number or touch  Enter to carry on to the next field.
5. Carry on, in the same manner inputting information into the remaining fields.
6. In the Remark field, the last field of a new record, input information specific to that person.
7. When finished, touch  Enter.

It is not necessary to work through all of the fields. Enter the desired information and then touch  Escape to enter the Browsing Display. After all of the desired information is entered, touch  Escape and enter the Browsing Display.


## BROWSING PHONEBOOK RECORDS

After inputting or editing information, the user can browse the information.

### To browse a record:

1. Touch  Page Up or  Page Down to scroll through the information.
2. Touch  Escape to terminate the browsing process. The message “Security ON/OFF” will display.
3. Touch “Security ON” to protect the information or “Security OFF” to keep information unprotected.

**Note:** If Security ON is touched, accessing the information will require a password.

4. To confirm the selection, select the highlighted item again or touch  Enter.


The record is in the phonebook and can be accessed at any time.

## VIEWING OR EDITING EXISTING PHONEBOOK RECORDS

Records in the Phonebook can be viewed or edited at any time.




 



**Note:** The system categorizes records as subgroups that are either protected or unprotected. When first entering Phonebook, by default, the system will display the unprotected records.

### To display locked records:

Touch  Lock and enter the password.






**To view or edit a Phonebook record:**

1. Touch [  ] Phonebook to enter the phonebook list.
2. Touch [  ] Page Up or [  ] Page Down to scroll the list.
3. Touch the desired item to highlight it.
4. Touch the highlighted item or [  ] Enter to browse the record's fields.
5. Touch [  ] Page Up or [  ] Page Down to scroll the fields.
6. Touch [  ] Edit and follow the procedure as outlined in the section INSERTING A NEW RECORD.

**[  ] SEARCH**

A record can be identified and located by remembering and inputting a few key words of the record.

**To search for a record with only a few key words:**

1. Touch [  ] Phonebook.
2. Select the desired subdirectory.
3. Touch [  ] Search.
4. Input the key word.
5. Touch [  ] Enter to start the search.
6. The result(s) will be displayed.

**Note:** The Insert function is not available in Search Mode.

7. Touch [  ] Escape to exit.

**Note about editing a record in [  ] Search:**

1. Locate the record by highlighting it.
2. Touch [  ] Enter and follow the procedure as outlined in the section, VIEWING OR EDITING EXISTING PHONEBOOK RECORDS.


**[  ] LOCK**

Information can be classified as protected or unprotected. Information that has been protected requires a password before it can be accessed.




For information and instructions on how to create a password refer to SECURITY ACCESS in the section SYSTEM SETUP.

**Note:** The system categorizes records as subgroups that are either protected or unprotected. When first entering Phonebook, by default, the system will display the unprotected records.

**To display locked records:**




Touch [  ] Lock and enter the password.

**To protect a record:**

1. In Phonebook Display, locate and highlight the record that is to be protected.
2. Touch the record again or touch [  ] Enter.
3. Touch [  ] Lock.
4. If [on] is not highlighted, touch [on] to highlight it.
5. Touch [  ] Enter.



The record is now locked and will require a password to access the information.

**To unprotect information:**

1. In Phonebook Display, access the locked record by entering the password.
2. Locate and highlight it.
3. Touch the record again or touch [  ] Enter.
4. Touch [  ] Lock.
5. Touch [off] to unlock the information.
6. Touch [  ] Enter or touch [OFF] again.

The record is now unlocked and will not require a password to access the information.


**To select a protected record:**

1. Touch [  ] lock to access a protected records list.
2. Input the password.
3. Locate the record to highlight it.
4. Touch the highlighted item or [  ] Enter.

**Note:** If the password has never been setup, refer to [SYSTEM SETUP](#) for information on setting or changing a password.


The password entered must correspond exactly to the password as it was entered in System Setup.

**To change an entry from the protected category to the unprotected category, the user should:**


1. In Phonebook Display access the locked record by entering the password.
2. Touch [  ] Lock and follow the procedure as listed above.

## NOTEPAD MODE

Important information can be kept as a note or message in Notepad Mode.

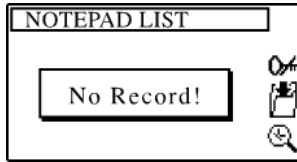

### To access Notepad Mode:

1. In the Main Menu Display, touch [  ] Notepad.



 

 

**Note:** Lock, Insert, and Search functions are similar to those mentioned at the Phonebook section.


## INSERTING A NEW NOTE

Information or a note can be entered and stored as a note in Notepad.



### To insert a new note:


1. Touch [  ] Notepad to enter Notepad Mode.
2. Touch [  ] Insert to enter the title field.
3. Input a title for the note. A title can be up to 20 characters.
4. Touch [  ] Enter to confirm and to enter the note field.
5. Input the note or message.
6. Touch [  ] Enter to browse the information.
7. Touch [  ] Escape.
8. Touch Security [ON] to protect the information or [OFF] to keep information unprotected. The selection becomes highlighted.
9. Touch [  ] Enter to accept.

**Note:** To edit the record, touch [  ] Edit after browsing the record, and follow the procedure as outlined in the section INSERTING A NEW RECORD.

## BOOKMARK MODE

The bookmark feature is ideal for storing Web Site addresses and related information about a Web Site.




 
 


### To access Bookmark:


1. In the Main Menu Display, touch [  ] Bookmark.

**Note:** Lock, Insert, and Search functions are similar to those mentioned at the Phonebook section.


 

## INSERTING A WEB SITE ADDRESS

### To insert a Web Site address:

1. Touch [  ] Bookmark.
2. Touch [  ] Insert to enter the address field.
3. Input the address for the web site.
4. Touch [  ] Enter to confirm and to enter the description.
5. Input a description or note pertaining to the Web Site.
6. Touch [  ] Enter to confirm and to enter the Web Site type.
7. Input the Web Site type.
8. Touch [  ] Enter to confirm and view the information.
9. Touch [  ] Escape to exit.
10. Touch Security [ON] to protect the information or [OFF] to keep information unprotected.
11. Touch [  ] Enter to accept.


**Note:** To edit the record, press [  ] EDIT after browsing the record, and follow the procedure as outlined above.

## TIME / DATE MODE

The Time Display has an analog clock icon with moving hour, minute and second hand. The Time Display also has a City Bar, [  ] Local Time Icon, [  ] World Time Icon, [  ] Alarm On / Off Icon, Date Bar, and numerical Time Bar.




 
 



#### To access Time / Date Mode:

1. In the Main Menu Display, touch [  ] Clock.

### CHOOSING A HOME CITY

Determine a Home City and then set the current local time and date for that location. After a time and date have been determined for a home city, other Time / Date Display functions can be utilized.

#### To enter the current time of a home city:

1. In Time / Date Display, touch the Local Bar to toggle between the [  ] Local Time Icon and the [  ] World Time Icon.
2. Select [  ] Local Time.
3. Touch the City Bar to display a pop-down box that contains an index of 84 world cities.
4. Touch [  ] Page Up or [  ] Page Down to view a new page.
5. Find the appropriate city from the list of 84 cities.
6. Highlight the appropriate selection.
7. Touch the highlighted selection or [  ] Enter to accept.

### TO ENTER OR EDIT THE HOME DATE AND HOME TIME

Once a Local City has been selected, the current date and time can be entered.

#### To enter the current date:

1. Touch Date Bar to edit the current date. Work from left to right along the date settings or select a specific character to edit.
2. Touch [confirm!] when finished to automatically return to the Time Editing Display.

**To enter the current time:**


1. Touch Time Bar to edit the time. Work from left to right along the time settings or select a specific digit to edit.
2. For 12-hour AM or PM format, press the AM or respective PM and enter the time by pressing the appropriate time digits. For 24-hour time format press 24h and enter the appropriate time.
3. Touch [confirm!] when finished to automatically return to the Time / Date Display.

**DAILY ALARM**

A daily alarm can be set to activate at a given time.

To set the daily alarm:

1. Touch the [🔔] Alarm located on the Local / World Time Bar.
2. Touch [YES] to set and activate the alarm and to set the desired alarm time.

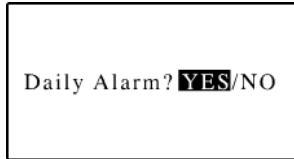

3. Enter the desired alarm time. Work from left to right along the time settings or select a specific character to edit.
4. Touch [confirm!] when finished to automatically return to the Time / Date Display.

**Note:** When the alarm is active, the alarm icon will change appearance to indicate that it is now set to activate at a given time.

**FINDING THE TIME OF CITIES AROUND THE WORLD**

Once the current time and date has been selected for a local city, the current time and date for other cities around the world can be displayed.


**To select a world time:**


1. Touch Local / World Time Bar and select [🌐]World Time.
2. Touch the City Bar to select the desired World City.
3. Touch [🌞] Daylight Saving to observe the correct time if the daylight saving schedule is in effect in that city.
4. Touch [🌐] World Time to toggle back to [🏠]Local Time and the respective Local Time Display.

## CALCULATOR MODE

The calculator can perform standard numerical calculations, metric conversions, and make currency exchange conversions.

### To access Calculator Mode:

1. In the Main Menu Display, touch [  ] Calculator.

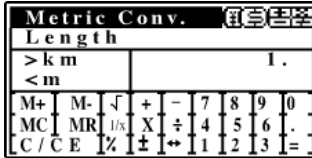


## NUMERICAL CALCULATIONS

Like many standard calculators, this device can make calculations by adding, subtracting, multiplying, and dividing. The calculator has a memory function and it can also perform square root calculations.

### To enter the Calculator Display:

Touch [  ] Calculator on the top bar to enter the Calculator Display.

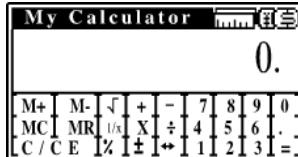


### To solve arithmetic calculations:

 
1. Touch the numerical key map to enter the numerical sequence.
2. Touch [=].


## [ ] METRIC CONVERSION

The unit provides 5 sub categories of units that metric / imperial conversions can be made. They are Length, Area, Weight, Temperature and Volume.

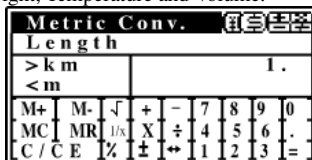

**To convert measurements between Metric and Imperial units:**


1. In Calculator Mode touch [  ] Metric Conversion on the top bar to enter the Conversion Display.
2. Touch the sub category list to select and highlight the desired units for conversion or use the [▲] or [▼] to move upwards or downwards to select the desired conversion.

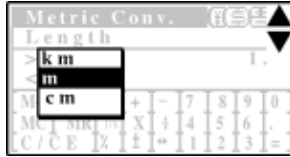

**Note:** To initiate a conversion, the user needs to first specify the source unit and then the target unit.


3. Touch the line starting with [>] and select the source unit of measurement.
4. Touch the line starting with [<] and select the target unit of measurement.
5. Input the value to be converted.
6. Touch [=] to obtain the conversion.


**To reverse a conversion:**

1. Touch [  ] icon to revert the conversion.

**[  ] CURRENCY CONVERSIONS**


The unit provides 12 sub categories of currency plus 4 (four) sections for additional currencies from which exchange conversions can be made. In addition, the currency rate for a given currency can be edited.

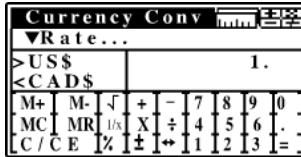**To set a currency rate:**

1. Touch [  ] Currency Conversion (located on the top bar) to enter Currency Conversion Display.
2. Touch [Rate] to edit the currency rate.




**To convert a given amount of currency to another currency:**

1. Touch [  ] Currency Conversion on the top bar to enter the Currency Conversion Display.
2. Touch the line starting with [ > ] and select the source currency. Use the [ ▲ ] or [ ▼ ] to move upwards or downwards to select the desired currency.
3. Touch the line starting with [ < ] to select the target currency. Again, use the [ ▲ ] or [ ▼ ] to move up or down to select the desired currency.
4. Input the value to be converted.
5. Touch [=] to obtain the conversion.

**CALENDAR MODE**





Use the Calendar in the same way that a day timer or scheduler is used to organize and manage individual schedules.

**To access Calendar Mode:**

1. In the Main Menu Display, touch [  ] Calendar.






The Calendar Display has 4 subsections. Each subsection is represented with an icon.

- |   |   |
|---|---|
| 1: [  ] Schedule Icon    | 2: [  ] Erase Past Schedule Icon |
| 3: [  ] Anniversary Icon | 4: [  ] Holiday Icon             |

**VIEWING PAST OR FUTURE DATES**

Past and future date can be viewed in a variety of ways.

**To view a past or future month in the current year:**

1. Enter [  ] Calendar Mode.
2. Touch [  ] Page Up to select the previous calendar months.
3. Touch [  ] Page Down to select future calendar months.

**Note:** There is another way to view a past or future month.

**An alternate method of viewing past or future months:**

1. Touch the Month to highlight it.



2. Touch [▲] or [▼] to select the desired month.
3. Touch [↵] Enter or Month to confirm.

**To view a past or future month in another year:**

1. Select the desired month.
2. Touch Year to highlight it.
3. Use the [▲] or [▼] to move up or down to select the desired year.
4. Touch [↵] Enter or Year to confirm.

**[📅] DAILY SCHEDULER**


Use the Daily Scheduler to manage various activities during a given day, for example, schedule appointments or indicate an important time.

**To input Daily Schedules:**


1. In Calendar Mode, locate the desired day.
2. Touch the day or [📅] Daily Schedule.


**Note:** If no schedules have been made for that day, a “No Record” message will appear. Ignore the message and proceed.

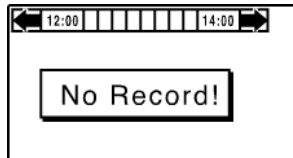

3. Touch the time bar at the top of the display to enter the time duration of the appointment. Touch the arrows at each end to locate the appropriate time.
4. Touch the appropriate 15-minute time box to identify the beginning of the time period.



5. Touch the appropriate finishing box to identify the end of the time period.

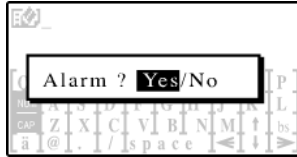6. Input a title for the time period.
7. Touch [  ] Enter.
8. Touch [no] for no alarm and [yes] if an alarm is required to sound at the beginning of the time period.




9. Touch [  ] Enter, then followed by [  ] Escape to return to the Daily Schedule Display.

#### To view a schedule:

1. Touch the desired date in Daily Schedule Display.



**Note:** If schedules have been selected for a particular day, the date on the calendar will be indicated with a dotted frame. A holiday is indicated with bold digits, and anniversary dates are indicated with reverse digits.

2. Touch the scheduled time that needs to be viewed.
3. Touch [  ] Enter.

#### [ ] ERASING PAST SCHEDULES

Schedules for dates that are now past can be erased in one step.


 
To erase schedules for past dates:





1. In Calendar Display, press [  ] Erasing Schedules.
2. Press [Yes] to erase past schedules and [No] to keep past schedules.
3. Press [  ] Enter to process.

#### [ ] ANNIVERSARY LISTS AND [ ] HOLIDAY LISTS


Special dates such as anniversaries, holidays, or other days of importance can be entered into the Data Bank.

#### To enter a special date:

1. Touch [  ] Anniversary to enter the Anniversary Display, or [  ] Holiday to enter the Holiday Display.

2. Touch [  ] Insert and enter the day and month of the special date.
3. Touch [Confirm!]
4. Input a title for the special occasion.
5. Touch [  ] Enter.
6. Input a note or information related to the occasion.
7. Touch [  ] Enter to view the information followed by [  ]Escape to return to the special date list.

**Note:** Once a special date has been selected, the date will be indicated on the calendar.

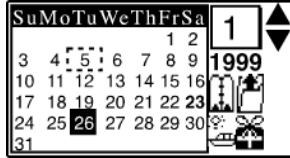

## TRANSLATOR MODE

Your PDA283 is also a translator. Words can be translated into any of seven languages. Each language can translate over 9,500 words.

### To access Translator Mode:

1. In the Main Menu Display, touch [  ] Translator.



### To make a translation:

1. Touch the abbreviated language name in the upper left corner of the LCD to view a pop down menu of the seven language choices.

**Note:** The abbreviations for the seven languages are as follows: [ENG] for English, [FRA] for French, [GER] for German, [SPA] for Spanish, [ITA] for Italian, [POR] for Portuguese, and [DUT] for Dutch.

2. Touch one of the seven language choices to be the source language or touch [▲] or [▼] to move upwards or downwards to select a language.
3. Touch [↵] Enter.
4. Input the word to be translated by touching the key map.

**Note:** Touch the [ä] accent symbol on the key map to open the accent key Map Display.

5. Touch [↵] Enter to start the translation. The result is then shown.
6. Touch the Language Bar to select a different target language from the one displayed.
7. Touch [⏪] Escape twice to exit Translation Mode.

## HELP MODE

A quick-and-easy method for finding the purpose of a display icon, the [?] Help function can provide answers.

### To access Help:

1. From within a display mode, press [?] Help, a blinking question mark will appear at the center of the LCD.



2. Touch the display icon in question and obtain a description of the function.



**Note:** Simple operations may not have the “Help” function. For these operations no blinking “question mark” will appear and the device will return to normal functioning.

3. When finished, touch [?] Help or [⏪] Escape to exit.

## RESET

The **RESET** function will return all settings to factory values. Accessing the function is required only when the unit is not operating in a favorable way such as in the rare case of a malfunction.

The **RESET** button is located at the back of the unit.

### To reset the unit:

1. Place a blunt stylus onto the **RESET** button and press.

## MAINTENANCE

When handled properly, this unit is engineered to give you years of satisfactory service. Here are a few product care instructions:

- Do not immerse the unit in water. If the unit comes in contact with water, dry it immediately with a soft lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials. Abrasive cleaning agents may scratch the plastic parts and corrode the electronic circuit.
- Do not subject the unit to excessive: force, shock, dust, temperature, or humidity. Such treatment may result in malfunction, a shorter electronic life span, damaged batteries, or distorted parts.
- Do not tamper with the unit's internal components. Doing so will terminate the unit's warranty and may cause damage. The unit contains no user-serviceable parts.
- Only use new batteries as specified in this instruction manual. Do not mix new and old batteries as the old batteries may leak.

## SPECIFICATIONS

Size:	117mm (H) X 78mm (L) X 13mm (D)
Weight:	103g (with batteries)
LCD Dimensions:	70mm (L) X 28mm (W)
Battery Type:	Main: Houses 2 (two) CR2032 3V lithium cells Backup: Houses 1 (one) CR1220 3V lithium cell