

BACK-Cover



Cover (size: 105x148.5)



ThermoDECT

Handset with Charger

User Manual



TD339HSC

AW (PDD)	TEXT (ENG)	TRANS	MODEL: TD339HSC	CU: OSI
			TITLE: MANUAL	
DATE	DATE	DATE	PREPARED BY: SAMSON	
AW (CU)	TEXT (P MGR)	AW (SUP)	DATE: 14/Mar/2003	
			F/O: P/N: 086-002938-014	
DATE	DATE	DATE		
IDT INTEGRATED DISPLAY TECHNOLOGY LTD.				

TABLE OF CONTENTS

Introduction	4
Key features	4
Safety and care instructions	5
Caring for your telephone	5
Safety precautions	5
Getting started	5
Unpacking the handset	5
Choosing a location for the charger	6
Connecting the charger	6
Installing the handset batteries	6
Registering the handset	7
Checking the base ID	7
Removing a handset	7
Setting a default base unit (multiple base units only)	8
Clearing all registrations	9
Assigning a name to the handset	9
Charging the handset batteries	10
Replacing the handset batteries	10
Attaching the belt clip	10
Using the handset	10
Before you start	10
Making a telephone call	11
Correcting a dialling error	11
Redialing a number	11
Answering a telephone call	11
Returning missed calls	12
Ending a telephone call	12
Using the handset speakerphone	12
Muting the microphone	12
Paging the handset from the base unit	12
Displaying caller ID information	12
Deleting call ID information	13
Using the telephone book	13
Programming the telephone book	13
Recalling an entry from the telephone book	14
Deleting an entry from the telephone book	14
Changing an entry in the telephone book	14

Changing the handset setting	15
Setting the dial mode (pulse or tone dial)	15
Changing the handset ring tone	15
Changing the handset ring volume level	16
Changing the earpiece volume level	16
Turning the low battery warning signal off or on	16
Turning the out of range warning signal off or on	17
Turning the key tone feature off or on	17
Turning the auto-answer feature off or on	18
Setting the handset display language	18
Using your telephone with a PABX or local telephone network	18
Changing the security PIN	19
Resetting your telephone system	20
Setting handset ring priority	20
Making an intercom call	21
Changing the ring tone for an intercom call	21
Making a 3-way conference call	21
Using the call waiting feature	22
Transferring calls between handsets	22
Temperature	22
Setting and using the handset clock	23
Selecting 12- or 24-hour display	23
Changing the date format	23
Changing the date and time	24
Setting the handset alarm	24
Deactivating the alarm	25
Using the child-friendly features	25
Locking and unlocking the handset keypad	25
Setting up the baby call (emergency call) feature	25
Playing the snake game	26
Playing the car game	27
Troubleshooting guide	28
Problems turning on the telephone	28
Problems making and answering telephone calls	29
Problems with multi-handset use	31
Problems with programming	31
Additional resources	31
Specifications	32
Warnings	33

INTRODUCTION

Thank you for selecting the Oregon Scientific™ ThermoDECT cordless handset as your personal communications device of choice. Your new handset is designed to give you many years of reliable service, and includes the following conveniences:

- Cool blue LCD backlight for caller ID, temperature display, and in use/battery charging indicators.
- Temperature display in Celsius or Fahrenheit degrees.
- Caller ID display for up to ten pre-set numbers.
- An electronic telephone book capable of recalling up to 50 pre-set names and numbers.
- Smooth integration with Oregon Scientific™ ThermoDECT telephone systems, and most DECT telephones.
- Child-friendly baby monitor, emergency dial, keypad lock, and game play options.
- Adjustable ring tones, volume levels, language display, handset IDs, and low battery/out of range warning signals.
- Dual-time clock with alarm.
- Long-life, 10-hour rechargeable batteries for those conversations that go on and on.

Read on to learn how to set up and use your new ThermoDECT cordless handset.

KEY FEATURES

1 Clear / phonebook/mute button

- Press to view the previous menu or clear the last entered digit.
- Press to mute or un-mute the microphone.
- Press to view the phonebook.

2 Down / Caller ID button

- Press to scroll through the Caller ID menu.
- Press to decrease earpiece or speakerphone volume.
- Press to review caller ID information.

3 Phone button

Press to begin and end a telephone call.

 
4 Speakerphone button

Press to turn the speakerphone off or on.

5 Microphone

6 R button / Flash

- Press to switch to another call.
- Press to access services if you are using a local network (PABX, Centrex, etc.)

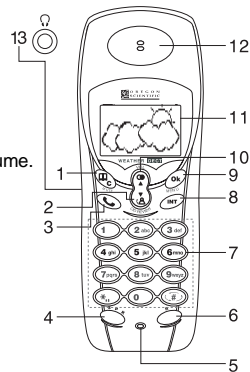

7 Keypad

Keypad 0-9, * and # buttons. Press to dial the number for the call or to enter text for phonebook entries.

8 Intercom button

Press to make and terminate an intercom(handset to handset) call.

9 OK button

Press to select or confirm a menu option.

10 Up / redial button

- Press to scroll through the Caller ID menu or recall the last number dialled.
- Press to increase earpiece or speakerphone volume.

11 Display**12 Earpiece****13 Headset jack****SAFETY AND CARE INSTRUCTIONS****Caring for your telephone**

To ensure you receive the maximum benefit from using your telephone, please observe the following guidelines.

- Do not use benzene, thinner, or similar cleaning agents to clean your ThermoDECT phone, as these may cause permanent damage not covered by the warranty. Use a clean, damp cloth.
- Keep your ThermoDECT phone away from hot, humid conditions and direct sunlight.
- Do not attempt to repair the telephone yourself. Contact the retailer or an electrician if your telephone requires servicing.

Safety precautions

Please observe the following safety precautions when setting up and using your ThermoDECT telephone.

- Do not use your ThermoDECT phone in or near water. Using your telephone with wet hands, while standing in water, or in wet conditions (such as in the rain) can damage the unit and cause injury from electric shock.
- Do not attempt to open or modify your telephone.

GETTING STARTED**Unpacking the handset**

When you unpack your ThermoDECT handset, make sure to keep all the packing materials in a safe place, in case you need to later transport the phone or return it for servicing.

In the box, you will find:

ENG

- The ThermoDECT cordless handset
- Two rechargeable batteries for the handset
- A 220-volt AC power cord
- The stand alone charger
- An attachable Belt Clip

Choosing a location for the charger

 
When selecting a location for the charger, observe the following guidelines:

- Choose a location that provides easy access to a 220-volt AC power source. Never try to lengthen the power cord. Use an appropriate AC power cord for your local power supply.
- Do not place the charger near the sink, bathtub, or shower.
- Do not place the charger near electrical appliance that may cause radio interference, such as large metal objects such a mirror or filing cabinet, an electric stove, washing machine, microwave oven, television, and fluorescent lights.
- Do not place the charger near heat sources such as radiators or air ducts, or in a place subject to direct sunlight.

Connecting the charger

To set up the charger:

1. Plug the small end of the AC power cord into the power socket located at the back of the charger.
2. Plug the other end of the AC power cord into a nearby AC wall outlet.

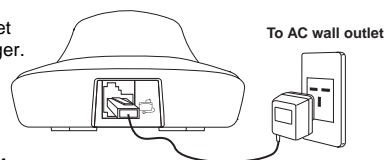


Installing the handset batteries

Your ThermoDECT handset is shipped with two rechargeable Ni-MH batteries (AAA size). To install the batteries:

1. Open the battery compartment located at the back of the handset.
2. Insert the batteries as shown in the diagram to the right, matching the polarity (+,-).

Note: Reversing the polarity may damage the handset.

 3. Replace the battery compartment by sliding it in the direction shown by the arrow in the diagram to the right. The lid clicks into place when it is secure.

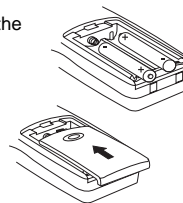

Registering the handset

To register a new handset:

1. On the base unit, press and hold the **PAGE** button until the blue **In Use** light flashes.
2. Press the **OK** button on the handset.
3. Press **↓** to select **Registration** from the options.
4. Press **OK**.
5. Press **↑** or **↓** to select a base unit number that does **not** have a check mark (✓) next to it.
(Checked numbers have already been registered.)
6. Press **OK** to display the **PIN Code?** prompt.
7. Enter the security PIN for the handset. The default PIN code is "0000". For more information about security PIN codes, refer to page 19.
8. Press **OK**.

Result: The handset display will flash the words **Base Search** until it locates the base unit. Once it finds the base unit, the base ID number will display on the handset. The base ID number is the unique identifying number for your base unit. You do not need to record or remember this number unless you are trying to register your handset to the base unit of another telephone system.

9. Press **OK** to end the registration session.

Checking the base ID

To check the base ID for your handset:

1. Press the **OK** button.
2. Press **↓** to select **Setup** from the options.
3. Press **OK**.
4. Press **↓** to select **Base ID** from the options.
5. Press **OK** to view the base ID.








The new handset is now registered to the base unit.

Removing a handset

You may need to do this to replace a handset.

1. Press the **OK** button on a handset that you do **not** intend to remove.
2. Press **↓** to select **Setup** from the options.
3. Press **OK**.







 
 
ENG


4. Press  to select **Remove HS** from the options.
5. Press .
6. Enter the security PIN for the handset. The default PIN code is "0000". For more information about security PIN codes, refer to page 19.
7. Press .
8. Press  or  until the number for the handset you wish to remove is highlighted.
Tip: The handset number is shown on the display when it is in standby mode.
Note: You cannot remove the handset that you are using.
9. Press .
10. Press  again to confirm your selection.

Setting a default base unit (multiple base units only)

If you cross-register your handset with more than one base unit, you can choose which base unit the phone will connect with when making or receiving calls. The default setting is for each handset to connect through the first base station it finds within range. However, if you wish to specify a particular base unit for a handset, you can change the setting using the instructions below.

To set a default base unit for a handset:


 
1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .
4. Press  to select **Base** from the options.
5. Press  to display the number of handsets registered with the current base.
6. Press  or  to select the base unit with which you wish to associate the handset.
 - To choose a specific base unit, place a mark [✓] next to the number that corresponds to the base unit through which you wish to connect. For example, if you wish to connect the handset through Base Unit 2, place a mark [✓] next to **2**.
 - To auto-select the first base unit within range, select **Automatic**.
7. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

Clearing all registrations

If you have registered numerous handsets and base units in your ThermoDECT telephone system, you may experience problems registering new handsets as your system becomes more complex. A single base unit can carry a maximum of 5 handsets. You cannot make intercom, 3-way, baby monitor, or transfer calls between handsets that are registered to two different base units. To clear all registrations and reorganize your telephone system, perform the following procedures. You will have to re-register the handsets and base units after you clear the system (refer to page 7 for instructions).

To reset the registration information for a handset:







 
1. Remove the batteries.
2. Press and hold the  button.
3. Insert the batteries and close the battery compartment.
4. Release the  button. The handset display will flash the word **TEST** and sound with a melody.
5. Press the **5** key. The handset will show the words **Not registered** on the display.
6. Repeat Steps 1-5 to reset all the other handsets.

To reset the registration information for the base unit:

1. Unplug the base unit from the AC power source.
2. Press and hold the **PAGE** button
3. Plug in the base unit. The blue **charge/in use** light will flash.
4. Release the **PAGE** button after the blue light flashes three times.
5. Reregister all the handsets following the procedure on page 7.


Assigning a name to the handset

You can assign an 8-character name for your new handset. The name you assign will display on the LCD display area for the handset whenever the phone is in standby mode. To assign a name:

1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Press  to select **Handset Name** from the options.
5. Press .
6. Enter the new name for the handset using the chart on page 13 as a guide.
Press the  button to delete the current entry. The maximum length for the name is 8 characters.
7. Press  to confirm your selection.



ENG

Note: The handset number will display after the assigned name. For example, if you named handset 2 "Sally", it will appear as "Sally 2". The number cannot be changed.

Tip: To return to standby mode, press and hold the  button.

Charging the handset batteries

The batteries may take up to 15 hours to fully charge the first time you use them.

The battery icon on the handset display becomes progressively empty as the batteries become low. When the batteries are fully charged, the icon looks full and dark, as shown here . When the icon appears empty as shown here  or if you hear the warning beep during a call, please:

- End the call as soon as possible.
- Don't use the speakerphone mode since this consumes more energy than the normal talk mode.
- Put the handset back on the charger for charging until the battery icon returns to high level.

To charge the handset, put it in the charger with the keypad facing outwards. The blue **CHARGE** light steadily lights to indicate that the handset is charging. When the battery indicator appears full, and the charge light goes off, the batteries are fully charged.

Replacing the batteries

Rechargeable batteries may need to be replaced from time to time. If you find that you can no longer recharge the batteries, replace them with two new batteries of the same size (AAA) and type (rechargeable Ni-MH) following the instructions on page 6.

Attaching the belt clip

To attach the belt clip to the back of the handset:

1. Slide the belt clip over the back of the handset until the ventilation holes are aligned.
2. Gently push the belt clip until it clicks into place.



USING THE HANDSET

Before you start



When you first set up your handset, you may hear an out of range beeping tone and see the words **Base 1** flashing on the handset display area. This is normal, and means that the handset needs to synchronize with the base unit before you can use it. Hold the handset near the base unit for a few seconds until the handset display stops flashing.


Making a telephone call

To make a telephone call using the **Phone** button:

1. Press  to get the dial tone, then dial the number, OR
2. Dial the number then press .

To make a call using the **speakerphone**:



1. Press the  button to get the dial tone, then dial the number, OR
2. Dial the number then press .

Note: To switch to speakerphone mode while you are on a call, press the  button.

Once you place a call, the display on the handset will begin timing the call length after approximately 15 seconds.



 

Correcting a dialling error

To correct a dialling error:

1. Press the  button to clear the digits one by one, OR
2. Continuously press the  button to clear all the digits at once.

Redialing a number



To redial one of the last 10 numbers that you called:

1. Press the  button to view a list of the last 10 numbers you dialed.
2. (Optional) To scroll through the list of numbers, press  or  to scroll up or down.
3. Press the  button to call the selected number.

Answering a telephone call

When you receive an incoming call, the handset will ring and flash **External call** on the display. If you are already on the line, you will hear a beep to let you know that you have a call waiting. (For more information about call waiting, refer to page 22 of this user manual.)



To answer a call:

1. Press , OR
2. Press the  button to use the speakerphone.


Once you answer the call, the display on the handset will begin timing the call length after approximately 15 seconds.

ENG


Returning missed calls


If you subscribe for caller ID service through your telephone carrier your ThermoDect telephone can keep track of missed calls information for you. When you miss a call, the handset will display "New Calls" and the number of calls you missed. To review the call history (including caller ID), press the  button. To dial the number, press the  button.




Ending a telephone call

To end a telephone call, press .

Using the handset speakerphone


To use the handset speakerphone during a conversation, press the  button. The battery life for speakerphone mode is ~ 1 hour.

To turn off the speakerphone, press the  button again.


Note: To adjust the speaker volume, press  first and then  or .

Muting the microphone

You can temporarily mute the microphone on your handset to prevent a caller from hearing a side conversation. To activate or deactivate the mute feature:

1. Press  to mute the microphone.

Note: The handset display shows the words **Secrecy on** while the microphone is muted. You cannot press any digits on the keypad until you return to normal listening mode.

2. To return the handset to normal listening mode, press  again.

Paging the handset from the base unit





To locate a lost or misplaced handset, press the **PAGE** button on the base unit. This forces the handset to ring for 30 seconds. Once you locate the handset, press any key to end the page.

Displaying caller ID information

If you have subscribed to caller ID service through your local carrier, the handset can display the name and number of a caller. To be displayed, the name must either be supplied by your network provider or entered in your phonebook. Your phone can track the caller IDs for up to 10 callers, along with the following information:





- Caller number (up to 20 digits).
- Caller name (up to 8 characters) if this is stored in the phonebook or supplied by your telephone network provider.
- The date and time of the last call made from the number.
- The number of calls made to the number.

To display caller ID information:

1. With the handset in standby mode, press the  button to view the list of caller IDs. A **No Entry Stored** message displays if there are no entries stored in the caller ID bank.
 2. Press  or  to select the name you want to check. If there is no number available for the caller you select, a line (____) displays on the handset. A warning tone sounds when you reach the end of the list.
- Tip:** To place a call to the number, press the  button while the number is displayed on the handset.

Deleting caller ID information

To delete call information for a caller ID:




1. Repeat Steps 1 – 2 above to select the caller ID for which you wish to delete call information.
2. Press the  button.
3. Press the  button.
4. Select **Delete** from the options.
5. Press  to confirm, or  to cancel.

USING THE TELEPHONE BOOK

Your ThermoDECT handset can store up to 50 names and telephone numbers. Names are limited to 8 characters and numbers are limited to 20 digits.



Programming the telephone book

To store an entry in the telephone book:



1. Press the  button.
2. Press  to select **Phonebook**.
3. Press  to select **Add Entry**.
4. Enter the name using the chart below as a guide.


Key	1 st press	2 nd press	3 rd press	4 th press	5 th press	6 th press	7 th press	8 th press	9 th press
0	0	\$	&	%	/	\			
1	space	1	-	=	^	~		2	
2	A	B	C	a	b	c	@		
3	D	E	F	d	e	f	3		
4	G	H	I	g	h	i	4		
5	J	K	L	j	k	l	5		
6	M	N	O	m	n	o	6		
7	P	Q	R	S	p	q	r	s	7
8	T	U	V	t	u	v	8		
9	W	X	Y	Z	w	x	y	z	9
*	*	.	:	:	:	?	!		
#	#	<	>	[]	()	{	}

ENG

Tip: Press the  button to go back to the previous character. To scroll to the next character, press the  button repeatedly.






Example: To enter the name "Anna", you would press 2, 6(x2), 6(x2), and 2.

5. Press  to display the **Number** prompt.
6. Enter the number using the keypad, including any prefixes or country codes.
7. Press  to display the **Stored** confirmation report.

Tip: To return to standby mode, press and hold the  button.









Recalling an entry from the telephone book

To make a call to a stored name and number:

1. Press .
2. Press  or  to select the desired entry.
3. (Optional) Press  to check the number.
4. Press  to place the call.

Deleting an entry from the telephone book




 
To delete an entry from the telephone book:






1. Press the  button.
2. Press  to select **Phonebook**.
3. Press  to select **Delete Entry**.
4. Press .
5. Press  or  to select the entry you wish to delete.
6. Press  to display the entry.
7. Press  again to confirm that you wish to delete the entry.

Result: The display shows the word **Deleted** to confirm that the name and number have been removed from your telephone book.

Changing an entry in the telephone book

To change an entry in the telephone book:

1. Press the  button.
2. Press  to select **Phonebook**.
3. Press  to select **Edit Entry**.
4. Press .









5. Press  or  to select the entry you wish to edit.
6. Press  to display the entry.
7. Modify the name using the chart on page 13 as a guide.
8. Press  when you are finished to display the entry exactly as it will appear in your phone book.
9. Press  again to confirm the change.


Result: The display shows the word **Stored** to confirm that the change has been made.

CHANGING THE HANDSET SETTINGS

Setting the dial mode (pulse or tone dial)









The handset is compatible with pulse-dialling (rotary) and tone-dialling (DTMF) systems. The default setting is DTMF mode. To set the dial mode:


1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .
4. Press  to select **Dialing mode** from the options.
5. Press .
6. Press  or  to select **Pulse** or **DTMF** mode.
7. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.


 
Changing the handset ring tone




 




You have a choice of five ring tones for external incoming calls. To select a ring tone:


1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Press  to select **Ext. Melody** from the options.
5. Press .
6. Press  or  to select the desired handset ring tone. You will hear the melody for each tone unless you previously disabled the ring.
7. Press  to confirm your selection.

  Tip: To return to standby mode, press and hold the  button.


 
Changing the handset ring volume level


 







To change the volume level while the handset is ringing, press the  or  arrows. To change the volume level while the handset is in **standby** mode:


1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Press  once to select **Ring Volume**.
5. Press .
6. Press  or  to select the desired handset ring volume. The ring volume level is progressively louder from level 1 to 5.
7. (Optional) To turn off the handset ringer, select **Volume Off**.
8. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

  Changing the earpiece volume level





To change the volume while you are **on a call**, press  or  until you reach the desired level. To change the volume level while the telephone is in **standby** mode:






1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Press  or  to select **Ear Volume** from the options.
5. Press .
6. Press  or  to adjust the volume up or down. The earpiece volume level is progressively louder from level 1 to 5.
7. Press  to confirm your selection.


Tip: To return to standby mode, press and hold the  button.

Turning the low battery warning signal off or on

When the batteries for your handset become low, you will hear a warning tone whenever you use the telephone. To turn the warning signal off or on:




 





1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Select **Warning Tones** from the options.
5. Press .


6. Press  to select **Low Battery** from the options.
7. Press .
8. Press  or  to select **off** or **on**. You will still hear a warning tone if the batteries become low while you are talking on the telephone.
9. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

Turning the out of range warning signal off or on









You will hear an out of range warning signal whenever you begin moving outside of the range for the base unit. To turn this warning signal off or on:


1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Select **Warning Tones** from the options.
5. Press .
6. Press  to select **Out of Range** from the options.
7. Press .
8. Press  or  to select **off** or **on**.
9. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

Turning the key tone feature off or on


Each time you press a key on your handset, you will hear a tone. To turn this feature off or on:







1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Select **Warning Tones** from the options.
5. Press .
6. Select **Key Press** from the options.
7. Press .
8. Press  or  to select **off** or **on**.
9. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

ENG









Turning the auto-answer feature off or on


The auto-answer feature allows you to answer a telephone call as soon as you remove the handset from the cradle. The default for this setting is **on**. If you would prefer to answer your calls by pressing the  button, you can change this setting. To turn the feature off or on:

1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Press  to select **Auto Answer** from the options.
5. Press  to select **off** or **on**.
6. Press  to confirm your selection.

Setting the handset display language

The default language for the handset display is English. To change the language:




1. Press the  button.
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Press  to select **Language** from the options.
5. Press .
6. Press  or  to select the preferred language.
7. Press  to confirm your selection.




Tip: To return to standby mode, press and hold the  button.

Using your telephone with a PABX or local telephone network


You can use your the handset with a PABX (Private Automatic Branch Exchange) or local telephone network. Use of your telephone with a modern system does not require special adjustment; however, with certain older systems, you may need to insert a pause between the prefix and the rest of the number.


To set up a prefix:

1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .



4. Press  to select **PABX setup** from the options.
5. Press .
6. Press  again to select **Code 1** from the options.
7. Enter the security PIN for the base, followed by the prefix. For more information about the security PIN, refer to the next section.


Example: The security PIN for John's ThermoDECT telephone is "0000". To dial an external number in his PABX, he must dial "9", and then the number. John would enter "0000" and "9" for this step.

8. Press  to confirm your entry.
9. (Optional) Repeat Steps 6 - 8 to set up a second prefix.

Tip: To return to standby mode, press and hold the  button.

To select a pause duration:







1. Follow Steps 1 – 5 above to enter the **PABX setup** menu.
2. Press the  button to select **Pause setup** from the options.
3. Press  to confirm your entry.


Tip: To return to standby mode, press and hold the  button.

Changing the security PIN

The handset is shipped with the security PIN (Personal Identification Number) set to "0000". You can change this to any 1-8 digit PIN you choose. The security PIN is used for resetting the system and identifying the telephone in a PABX (Private Automatic Branch Exchange) or local telephone network.

To change the security PIN:







1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .
4. Press  to select **PIN code** from the options.
5. Press .
6. Enter the new PIN number. The PIN number will not show on the display for security reasons.
7. Press  to confirm the change.

Tip: To return to standby mode, press and hold the  button.




Resetting your telephone system

Resetting the system clears all information that you have stored on the handset – such as telephone book entries, caller ID history, and the baby call (emergency call) number – and returns your ThermoDECT telephone to its default settings (shown on page 32). There are two ways to reset the system – with a security PIN, and without a security PIN.

To reset the system with a security PIN:







1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .
4. Press  to select **Default** from the options.
5. Press .
6. Enter your security PIN number. If you enter the wrong PIN number, an **Error** message displays.
7. Press . A confirmation melody sounds from the handset, and the system resets and flashes the word "Base" on the handset. Hold the handset near the base unit for a few seconds until it finds the base.





 
 

To reset the system without a security PIN:


1. Slide the battery lid off the back of the unit.
2. Remove the handset batteries.
3. Press and hold the  button.
4. Insert the batteries into the handset, then release the button. The word **Default** displays on the handset to confirm the system has been reset.
5. Slide the battery lid back onto the unit until it clicks into place.
6. Press  to reset the system or  to cancel.

Setting handset ring priority

Ring priority allows you to set one handset to ring before others start. To turn the handset ring priority off or on:





1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .
4. Press  to select **Ring Priority** from the options.
5. Press .
6. Press  to set the ring priority to **off**, **on**, or **Def. Priority**.

7. Press .
8. (Optional, if you selected **Def Priority** in Step 6) Press  or  to select the handset for which you wish to set ring priority.
9. Press .
10. Press  or  to select the number of rings you want this handset to ring ahead of the other handsets.
11. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

 


 

 
 

Making an intercom call


If you have more than one handset registered with the base unit, you can make an intercom call between two handsets. To make an intercom call:

1. Press the  button on your handset.
2. Enter the handset number (1 – 5) that you wish to page.
Result: The handset you selected rings. Your handset number flashes on the LCD display area to let the recipient know it is an internal call.
3. (Optional) To answer the call, press the  button.
4. (Optional) To end the call, press the  or  button.

Changing the ring tone for an intercom call

You can change the ring tone for an intercom call to differentiate internal from external calls. To change the ring tone:

1. Press the .
2. Press  to select **Handset Menu** from the options.
3. Press .
4. Press  to select **Int. Melody** from the options.
5. Press .
6. Press  or  to select the desired melody.
7. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

Making a 3-way conference call

If you have more than one handset registered with the base unit, you can make 3-way conference calls between an external call party and two internal handset holders. To make a 3-way conference call:

1. Establish contact with the external party by either placing a call to that person, or answering an incoming call.

ENG

2. Press **INT** to make an intercom call to another handset.
3. Enter the handset number that you wish to page.
Result: The handset you paged rings. The internal party can answer the call by pressing the **CALL** button.
4. Press and hold the **#** button for approximately 2 seconds, until you see the word **Conference** flash on the display and hear a confirmation beep.
Result: All three parties are connected into the call, and can talk together.
Tip: You can end a 3-way conference call exactly as you would any other call. Just press the **CALL** button.

Using the call waiting feature

If you receive an external call while you are talking to someone through the intercom, you will hear a call waiting tone. To answer the incoming call:

1. Press the **CALL** button to terminate the intercom call.
Result: The external call rings.
2. Press **CALL** again to answer the external call.

Transferring calls between handsets

You can transfer an external call from one handset to another if you have registered more than one handset with your ThermoDECT telephone. To transfer a call:

 
1. During a telephone conversation, press the **INT** button to place the caller on hold.
2. Enter the handset number (1 – 5) to which you wish to transfer the call.
Result: The handset you paged rings, with **EXT** and **INT** flashing on the LCD display. The internal party can answer the call by pressing the **CALL** button.
3. (Optional) Hang up the telephone to transfer the call once someone answers. If no one answers, press **INT** to terminate the page and return to the caller.

TEMPERATURE

The ThermoDECT base unit displays either the indoor temperature (Oregon Scientific Model TD338) or the indoor or outdoor temperature (Oregon Scientific Model TD339)

The handset can display the temperature information for both the built-in and external sensors.

The ThermoDECT handset displays exactly the same temperature reading as shown on the base unit.



Note: The temperature reading is the current temperature at the base unit (for Indoor) or the current temperature at the remote sensor (for outdoor). It is not the temperature reading at the current location of the handset.

SETTING AND USING THE HANDSET CLOCK

You can change the following time and date settings for the clock display on your handset:

- Time – 12- or 24-hour clock display
- Date – DD/MM (Date/Month) or MM/DD (Month/Date) display
- Current date and time

If you have multiple handsets, you only need to set the time and date on one handset. The alarm can be set for each handset separately.

Selecting 12- or 24-hour display

To change the handset hour display format:

1. Press the **OK** button.
2. Press **▼** to select **Setup** from the options.
3. Press **OK**.
4. Press **OK** again to select **Clock Setting** from the options.
5. Press **▼** to select **Hour Format** from the options.
6. Press **OK**.
7. Press **▼** to select **12** or **24** hours.
8. Press **OK** to confirm your selection.

Tip: To return to standby mode, press and hold the **M6** button.

Changing the date format






 

To change the handset date display format:


1. Press the **OK** button.
2. Press **▼** to select **Setup** from the options.
3. Press **OK**.
4. Press **OK** again to select **Clock Setting** from the options.
5. Press **▼** to select **Date Format** from the options.
6. Press **OK**.
7. Press **▲** or **▼** to select **DD/MM** (Date/Month) or **MM/DD** (Month/Date).
8. Press **OK** to confirm your selection.

Tip: To return to standby mode, press and hold the **M6** button.

Changing the date and time



 






 

 
 

 
To change the date and time on the system clock (e.g. all handsets):

1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .
4. Press  again to select **Clock Setting** from the options.
5. Press  again to select **Time Setting**.
6. Press the keypad digits (0-9) to input the date and month.
7. Press  to confirm the date and month, and to enter the time setup mode.
8. Press the keypad digits (0 – 9) to input the hour and minute.
9. Press  to confirm your selection.

Tip: To return to standby mode, press and hold the  button.

Setting the handset alarm

Your ThermoDECT handset comes with two independent alarms that you can set to ring at specified times. To set the alarm:

1. Press the  button.
2. Press  to select **Setup** from the options.
3. Press .
4. Press  to select **Alarms** from the options.
5. Press .
6. Press  or  to select **Alarm 1** or **Alarm 2**.
7. Press  to confirm your selection.
8. Press  or  to turn the alarm **off** or **on**.
9. Press . If you turned the alarm off in Step 8, you are returned to the Setup menu, and can exit by pressing the  button. If you turned the alarm on, proceed to Steps 10 – 11.
10. Press the keypad digits (0 – 9) to enter the hour and minute at which you want the alarm to sound. The alarm setting is always in 12-hour mode.
11. (Optional) Press the  or  keys to switch between AM and PM.
12. Press  to confirm when you are finished. A bell-shaped symbol shows on the lower right corner of the handset display when the alarm is set.

Deactivating the alarm


When one of the alarms activates, the handset rings with the page tone. To stop the alarm, press any key on the handset or the **PAGE** key on the base unit.

USING THE CHILD-FRIENDLY FEATURES

The handset telephone includes the following child-friendly features:






- Keypad lock – locks the keypad to prevent small children from inadvertently placing calls.
- Baby call – calls a pre-set number (such as to a relative or the police) whenever any key is pressed.
- Baby sit – uses a second handset as a baby monitor to listen to your child's activities from another room.
- Games – converts the handset into a game console for playing the car and snake games.

Locking and unlocking the handset keypad

You can temporarily lock the keypad to prevent small children from inadvertently placing calls. When the keypad is locked, a small key icon  will appear in the top right corner of the handset display area.

Note: When the handset keypad is locked, YOU CANNOT MAKE ANY CALLS, EVEN TO EMERGENCY NUMBERS.

To lock the handset keypad:


 

1. Press the  button.
2. Press  to select **Keypad lock** from the options that display.
3. Press .
4. Press  to select **Keypad lock on** from the options that display.
5. Press  to confirm your selection.

To unlock the handset keypad, repeat Steps 1-5 above. In Step 4, select **Keypad lock off**.



Setting up the baby call (emergency call) feature

With this option, you can program the handset to dial a single, pre-set number whenever any key is pressed. No other calls are allowed, including emergency numbers, unless you program the baby call feature to call an emergency number. There are two steps to using the baby call feature: first, set up the emergency call number, then activate the feature.

To set up the baby call **number**:




 

1. Press the  button.
2. Press  to select **Babycall** from the options.
3. Press .

ENG




4. Press  to select **Number** from the options.
5. Use the keypad digits (0 – 9) to enter the number (including any applicable prefixes or STD codes).
6. Press  to confirm when you are finished.

Tip: To reset the baby call number, repeat Steps 1 – 5.

To **activate** the baby call feature:








1. Press the  button.
2. Press  to select **Babycall** from the options.
3. Press .
4. Press  to select **Babycall on**. The phrase **Babycall** steadily shows on the handset display.
5. Press  to confirm when you are finished.


To turn **off** the baby call feature:

1. Press the  button two times.
2. Press  to select **off** from the options.
3. Press  to confirm your selection.





Playing the snake game

The goal of the snake game is to help the snake reach the eggs without running into a wall or turning back on itself. To start the game:

1. Press the  button.
2. Press  to select **Games** from the options.
3. Press .
4. Press  to select **Snake** from the options.
5. Press  or  to select the game level. Game levels are progressively difficult from 1 (beginner) to 5 (expert).
6. Press  to start the game.

To end game, press the  button.


Press the keys as shown below to move the snake in the desired direction:

<u>Direction</u>	<u>Key</u>	Tip: When the snake is moving, you only need to turn the snake to the left or right. If you move the snake backward, it will turn on itself, and end the game. There is no way to make the snake go faster.
Up (↑)	2 or 	
Backward/left (←)	4 or 	
Forward/right (→)	6 or 	
Down (↓)	8 or 	

Snake game description




 When the game starts, the snake is moving in the direction of the arrow.




When the snake reaches the same row as the egg, press **4** or **⏪** to turn toward the egg.

 Press '4' key



 The snake turns left and is now moving toward the egg.



As the snake passes over the egg, the egg will move to a different location. Press **8** or **⏩** to move the snake down.

Press '8' key



The snake is moving down when it reaches the same row as the egg. Press **6** or **⏹** to turn right.

Press '6' key



The snake turns right and is moving toward the egg.



Playing the car game

The goal of the car game is to clear all the dots without getting hit by the other car. To start the game:


1. Press the **OK** button.
2. Press **⏩** to select **Games** from the options.
3. Press **OK**.
4. Press **⏩** to select **Car** from the options.
5. Press **⏪** or **⏩** to select the game level. Game levels are progressively difficult from 1 (beginner) to 5 (expert).
6. Press **OK** to start the game.

ENG


Press the keys as shown below to move the car in the desired direction:

Direction	Key	Tip: You only need to use the (↑) and (↓) keys to navigate the car between the barriers. The (→) key acts as a break to reduce the car's speed.
Up (↑)	2 or 	
Break (→)	6	
Down (↓)	8 or 	

 
Car game description



 
When the game starts, your car is moving to the left; the computer-driven car is moving to the right.



 When you reach the gap, press **the appropriate key** to move to another row and avoid crashing into the computer car.

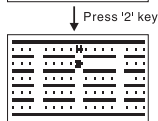

 Press the keys to move between the rows as you try to clear all the dots. The computer car will try to crash into you as you proceed. Press **6** if you need to break.



Continue playing until you clear all the dots.

TROUBLESHOOTING GUIDE

This section includes a list of frequently asked questions for problems you may encounter with your ThermoDECT telephone. If your telephone is not operating as you think it should, check here before arranging for servicing.

Problems turning on the telephone

"I cannot hear a dial tone or get the LCD display to work."


Check to make sure the telephone is properly set up:

- Is the base unit plugged into the telephone line and AC power source? See the base unit manual for instructions.
- Is the AC power source turned on at the socket?
- Are the batteries properly installed in the handset? See page 6 for instructions.

If the problem persists, please contact our help line following the instructions on our website (www.oregonscientific.com). Never attempt to repair or adjust the telephone yourself. This can cause damage to the unit, electrical shock, and may invalidate your warranty.

Problems making and answering calls


“I cannot make or answer calls.”

- Try moving the handset closer to the base unit.
- The battery charge level may be low. The battery life shortens when you use the Speakerphone (handsfree) mode. Check the LCD display for the low battery warning signal . If the battery is low, place the handset in the charging cradle until the battery signal appears full.
- Check the power connection by switching off the power at the main socket, waiting a few seconds, then switching it back on.

“When I press the phone button, I hear the busy tone.”

You will hear a busy tone if the line is engaged with another handset that is registered to the same base unit. Check the LCD display area for the **EXT** symbol. This symbol indicates that someone else is already on the line.

“When I press the keys on my handset, nothing happens. The display is showing the symbol.”

The  symbol means that the keypad lock feature has been activated. Refer to page 25 for instructions on how to unlock the keypad.


“When I press the keys on my handset, digits appear on the display but I cannot make an outside call.”

- You may have inadvertently activated the call barring function on this handset, which prevents calls from being placed.
- The handset may be unable to find the base unit. Try moving closer to the base unit.
- If you have registered additional handsets to the same base unit, make sure they are not already on a call. The LCD display on your handset will display the **EXT** symbol if the line is engaged.
- The dial mode setting may be incorrect. Refer to page 15 for instructions on how to set the dial mode.

“My call was cut off when I went out of range of the base unit. Now I cannot use my handset.”

Please move the handset closer to the base unit.

“I hear a tone while I am using my handset, and the battery symbol on the display looks empty.”

The battery needs to be recharged. Put the handset into the charging cradle until the battery symbol looks full . It may take up to 15 hours to fully recharge.

“I just recharged the batteries, but I still get a warning that they are not charged”

The batteries may need to be replaced. Rechargeable batteries gradually lose their ability to be recharged as they get older. Replace the batteries with two rechargeable Ni-MH batteries (AAA size).

“The handset does not ring when a call comes in.”

- Check that you have not turned off the ringer volume level. Refer to page 16 for instructions.
- Check that the total REN value of all equipment connected to your telephone line is not more than 4. You may need to disconnect one or more telephones to see if this helps.

“The caller display feature is not working”

You must subscribe for caller ID services through your telephone network provider for the caller ID to display on your ThermoDECT telephone. Please check with your provider.

“The caller display works but the caller’s name does not display even when I am sure the caller is using the same number that I entered in the phone book.”

If the caller’s number does not exactly match what you have entered in your phone book, including the STD code and any prefixes, the phone book cannot match the name to the caller ID. Check the phone book to make sure the full number is stored there.

“I pressed the phone button several times, but keep getting the busy tone.

Your handset may no longer be registered with the base unit. Unplug the AC power source from the bottom of the base unit, then plug it back in. Press and hold the **PAGE** button until the blue **IN USE** light flashes. Then, follow the instructions on page 7 to re-register your handset.

“I keep hearing a short beep on my handset, and the display is flashing the word ‘Base’.”

Your handset may temporarily lose its synchronization with the base unit due to radio interference in your area. When this happens, you will hear a beep and see the word **Base** while the base unit switches to another channel to overcome the interference. You can move closer to the base unit to help reduce your telephone’s susceptibility to radio interference. If you do not wish to hear the beep tone, you can turn it off following the instructions on page 17.

Problems with multi-handset use**“I’m having problems registering a new handset.”**

- Sometimes it helps to unplug and then reconnect your base unit to its AC power source before you start the registration procedure.
- Make sure you have selected a base number that is not already assigned. Choose a number that does not have a [✓] check mark next to it.

- You may have already registered 5 handsets to the base unit. If so, you will need to remove one or add another base unit before you can register the new handset.
- If you are replacing a faulty handset, make sure you have fully removed the faulty one before registering the new one. Refer to the instructions on page 16 for more information.
- If you are still experiencing problems, you may need to reset all the registrations, then start over. Refer to page 7 for instructions.

“I cannot make a call.”

Only one outside call and one intercom call can take place at the same time. Make sure no one else is already using the phone; if so, you will see the **EXT** symbol on the handset display area, and will hear the busy tone when you try to place a call.

Problems with programming

“I changed the PIN, and I've forgotten the new one.”

Please refer to page 19 for instructions on resetting the PIN number.

“I tried to register a new handset, and now all the handsets are flashing “Base” and I can not use the telephone.”

Reset your telephone, then try the registration process again. If you are still experiencing problems, reset all your handsets and base units following the instructions on page 9, then re-register the handsets.

ADDITIONAL RESOURCES

Visit our website to learn more about your ThermoDECT telephone and other Oregon Scientific products such as additional handsets and base units. Contact information for our team of customer service representatives is on the website.

Website: www.oregonscientific.com

ENG

SPECIFICATIONS

Weight Dimension

Charger: TBA (without battery) Charger: TBA (HxWxD)
 Handset : 102g (without battery) Handset: 138 x 52 x 27mm (HxWxD)

Technical details

Standard Digital Enhanced Cordless
 Telecommunications (DECT)

Frequency range 1880 to 1990 MHz (band width = 20 MHz)

Channel band width 1.728 MHz

Modulation GFSK

Speech coding Adaptive Differential Pulse Code Modulation
 (ASPCM) at 32 kbit/s

Communication range Up to 300m in open space/ Up to 50m in
 building

Base power supply 220V / 50Hz for the charger

Handset power supply 2 rechargeable batteries AAA, Ni-MH 600mAh

Handset battery charging time 15 hours

Operating time Standby: 150 hours
 Talking : 10 hours (speakerphone off)
 Handsfree about 1 hour

Operating temperature 0°C to 40°C

Storage temperature -20°C to 60°C

Temperature monitoring range 0°C to 40°C

Default Settings:

Language	English	INT melody	1	PIN CODE	0000
Handset name	H A N D S E T	Ring volume	3	Dial mode	D T M F
Low batt indicator	O N	Ear volume	2	Ring priority	n o n e
Out of range indicator	O N	Phonebook	e m p t y	PABX codes	n o n e
Keyclick	O N	CLID list	e m p t y		
Auto answer	O N	Redial list	e m p t y		

WARNINGS

Your ThermoDECT handset has been designed to provide you with many years of reliable service. To ensure that you use the product safely and correctly, observe the following safety warnings:

- Certain types of rechargeable batteries, such as Ni-MH rechargeable batteries, may require special handling and disposal. Check with your local waste disposal authorities for instructions.
- Do not use the handset in or near water, as this can cause damage to the unit and personal injury through electric shock.
- Do not use the handset out-of-doors during a thunderstorm. Unplug the base unit from the telephone line and power source when there are severe storms in your area.
- Do not attempt to open or modify your telephone.
- The product, specifications and contents of this user manual are subject to change without further notice.
- Figures and display examples in this user manual are for reference only, and may differ slightly from the actual product.

© 2003 Oregon Scientific. All rights reserved.



ENG

NOTES

