



GB

COUNTDOWN TIME WITH JUMBO DISPLAY



MODEL: TR113

USER'S MANUAL

TIME FEATURE

1. L.C.D. count-down timer
2. 4 digits display showing minute time ("M" mark) and second time ("S" mark).
3. Timer can be programmed maximum up to 99 minute, 59 seconds and counts down at 1 second resolution.
4. Buzzer alarm output when timer counts down at 1 second resolution.
5. Timer memory recall function.
6. Individual buttons for minute and second setting.

TIMER TIME SETTING

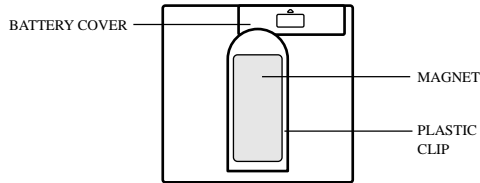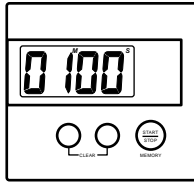

1. press **MIN** and **SEC** button at the same time to reset timer to zero.
2. Press **MIN** button to advance minute digits (beep sound can be heard). Press and hold **MIN** button for speed setting.
3. Press **SEC** button to advance second digits (beep sound can be heard). Press and hold **SEC** button for speed setting.

TIMER START/STOP

1. After time setting is ready, press **START/STOP** button once and timer will start to count down. "M" and "S" marks will flash when timer is running.
2. When timer is counting, press **START/STOP** button once and timer will stop. "M" and "S" marks will stop flashing and remain on display.
3. Press **START/STOP** button once and timer will resume counting again.

TIMER BUZZER ALARM

1. When timer counts down to 00M and 00S, timer buzzer alarm will sound for 30 seconds.
2. Timer buzzer alarm can be stopped by either pressing **MIN**, **SEC** or **START/STOP** buttons.

TIMER MEMORY RECALL

1. After timer buzzer alarm stops, press **START/STOP** button once to recall pre-set timer and timer will count down for another lap.
2. Pressing the **START/STOP** button second time can start timer and timer will count down for another lap.



BATTERY REPLACEMENT

To open the battery door follow the arrow direction on the back cover of the timer.

Remove old battery, insert a new 1.5V “AAA” battery as indicated by the polarity symbols (+&-) marked and close battery cover.

CLIP ATTACHMENT

The plastic clip on the back of the timer helps to clip it on a thin board or the shirt pocket.

MAGNETIC ATTACHMENT

The timer can attach to iron or steel surface, using the magnet on the backside of the timer.

PRECAUTION

When handled properly, this unit is engineered to give you years of satisfactory service. Here are a few product care instructions:

1. Do not immerse the unit in water. If the unit comes in contact with water, dry it immediately with a soft lint-free cloth.
2. Do not clean the unit with alcohol containing detergent, abrasive or corrosive materials. Abrasive cleaning agents may scratch the plastic parts and corrode the electronic circuit.
3. Do not subject the unit to excessive: force, shock, dust, temperature, or humidity. Such treatment may result in malfunction, a shorter electronic life span, damaged batteries, or distorted parts.

4. Do not tamper with the unit's internal components. Doing so will terminate the unit's warranty and may cause damage. The unit contains no user-serviceable parts.
5. Only use new batteries as specified in this instruction manual. Do not mix new and old batteries as the old batteries may leak.
6. Read this instruction manual thoroughly before operating the unit.

CAUTION

- The content of this manual and the product specifications are subject to change without further notice.
- The technical specifications of this product are subject to change without notice.
- Due to printing limitation, the displays shown in this manual may differ from the actual display.
- The contents of this manual may not be reproduced without the permission of the manufacturer.