 


Extra Handset WD338HSC Quick Installation Guide

Installation

a) Connecting the charger



b) Installing handset batteries

- 1) Insert the batteries to the handset following the correct polarity.
- 2) The handset must be charged for at least 15 hours before initial operation.
- To use and register the extra Handset WD338HSC to your WD338 main base, refer section 2.1 of your WD338 User's manual.

Note: Reversing the battery polarity may damage the unit.

Safety

- 1) Use the supplied adapter only & do not try to lengthen the power cable.
- Do not place this Handset phone close to another phone or other electrical equipment that may cause interference and result in the abnormal function of this phone.
- Occasional loss of synchronization between handset and base unit is normal if there is a high level of electrical interference in the environment.
- 4) Do not install the charger near a sink, bath, shower, or anywhere else where it can get wet.
- If the charger fell into water, do not retrieve it until you have unplugged the power lead from the mains socket.

Menu Map

1) Weather information

- Forecast (5 weather condition forecast)
- Temperature 1, 2, 3 (temperature and humidity data from built in sensor and remote sensor units.

2) Phonebook

- · Add entry / Edit entry / Delete entry
- Keypad lock / Babycall (direct call) / Monitor mode (Baby sit)
 - ON / OFF selection

4) Handset menu

- Warning tones ON / OFF selection of key press; low battery; out of range
- Ring & Ear volume (5 level adjustment)
- Internal / External Melody (5 melody selection)
- · Auto answer ON / OFF selection
- Handset Name
- · Language (Selection display language)

5) Setup

- . Clock settings (Date / hour format & setting)
- · Alarms (2 alarms setting)
- Base ID (display base ID)
- · Select base (base seletion)
- · Remove HS (remove other handset from base)
- PIN code (changing PIN)
- · Ring Priority selection
- Dialling mode (Pulse / DTMF(tone) selection)
- PABX setup of PABX code and pause (3 seconds/ 5 seconds)
- Default (restore to default settings)

6) Registration (base registration)

7) Games

- Snake
- Car



WD338HSC Quick Reference

Making a call	S dial number ⇒ connect
Answer a call (Auto answer on)	Take the handset from the base and talk directly
End a call	end a call
Redial	© ⇒ scroll
View CID record	(A enter CID list ⇒ (A) or (A) scroll ⇒ (C) check phone number ⇒
	os check time stamp
Search phonebook record	(A) or A scroll
Add phonebook record	ok menu ⇒ (Å Phonebook ⇒ ok) "Add entry" ⇒ enter Name
	⇒ (ox) enter number ⇒ (ox) stored
View weather forecast	os menu ⇒ os Weather ⇒ os Forecast ⇒ os confirm
View temperature & humidity	menu ⇒
SelectLanguage	øk menu ⇔ (Å Handset menu ⇔ (Å Language ⇔ (Å select
	Language (ok) ⇒ (ok) confirm
Adjust earpiece volume	(ok) menu ⇒ (Å Handset menu ⇒ (ok) ⇒ (Å Ear volume ⇒ (ok)
	⇒ (Select ⇒ ⊙ confirm
Adjust ring volume	(ok) menu ⇒ (A) Handset menu ⇒ (ok) ⇒ (A) Ring volume ⇒ (ok)
	⇒ (Select ⇒ Ok) confirm
Adjust ring melody	ox menu ⇒ A Handset menu ⇒ Ox ⇒ A External Melody ⇒
	(%) ⇒ (A) Select melody ⇒ (%) confirm
Turn off battery warning tone	(ok) menu ⇒ (N/A) Handset menu ⇒ (ok) warming tone ⇒ (ok) ⇒ (N/A)
	Low battery ⇒ ♠ ⇒ ♠ Select ♠ ON/OFF ⇒ ♠ confirm
Turn off auto-answer	menu ⇒ (♣ Handset menu ⇒ ∞ ⇒ (♣ Auto Answer ⇒ ∞)
	⇒ (Select (ok) ON/OFF ⇒ (ok) confirm
	*when auto-answer is "off", press 🕒 to answer a call