


Weather DECT WD338 Quick Installation Guide

Installation

a) Connecting the base unit

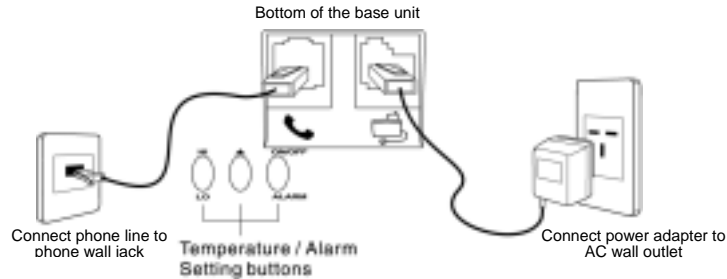

b) Installing handset batteries

- 1) Insert the batteries for the handset following the correct polarity
- 2) The handset must be charged for at least 15 hours before initial operation.

c) Set up remote sensor

- 1) Remove the battery door
- 2) Select channel and unit of measurement (°C or °F)



- 3) Insert batteries following correct polarity
- 4) Place the remote sensor close to the base unit allowing it to recognize the sensor

Note: Reversing the battery polarity may damage the unit.
Charge the handset for at least 15 hours before initial operation

Safety

- 1) Use the supplied adapter only & do not try to lengthen the power cable
- 2) Do not place this Weather DECT phone close to another phone or other electrical equipment that may cause interference and result in the abnormal function of this phone
- 3) Occasional loss of synchronization between handset and base unit is normal if there is a high level of electrical interference in the environment.
- 4) Do not install the base unit near a sink, bath or shower, or anywhere else where it could get wet.
- 5) If the base unit ever falls into water, do not retrieve it until you have unplugged the power lead from the mains socket and the telephone line plug from the telephone socket.

Weather DECT WD338 Quick Installation Guide

Menu Map

- 1) **Weather information**
 - Forecast (5 weather condition forecast)
 - Temperature 1 , 2 , 3 (temperature and humidity data from built in sensor and remote sensor units.
- 2) **Phonebook**
 - Add entry / Edit entry / Delete entry
- 3) **Keypad lock / Babycall (direct call) / Monitor mode (Baby sit)**
 - ON / OFF selection
- 4) **Handset menu**
 - Warning tones ON / OFF selection of key press; low battery; out of range
 - Ring & Ear volume (5 level adjustment)
 - Internal / External Melody (5 melody selection)
 - Auto answer / Time display ON / OFF selection
 - Handset Name
 - Language (Selection between English, Germany, Italian, Spanish, French)
- 5) **Setup**
 - Clock settings (Date / hour format & setting)
 - Alarms (2 alarms setting)
 - Base Volume / Melody (5 level adjustment/selection)
 - Base ID setting (*Advance setting)
 - Select base (*Advance setting)
 - Remove HS (*Advance setting)
 - PIN code (*Advance setting)
 - Ring Priority ON / OFF selection
 - Dialing mode (Pulse / DTMF(tone) selection (*Advance setting)
 - PABX setup of PABX code and pause (3 seconds/ 5 seconds)
 - Default (return to default setting)
- 6) **Registration** (* Please refer to Advance setting)
- 7) **Games**
 - Snake
 - Car

Function Operation (Pls refer to user guide for detail instruction)

Making a call	⇒ dial number ⇒ connect
Answer a call (Auto answer on)	Take the handset from the base and talk directly.
End a call	end a call
Redial	⇒ scroll
View CID record	enter CID list ⇒ or scroll ⇒ check phone number ⇒ check time stamp
Search phonebook record	⇒ or scroll
Add phonebook record	menu ⇒ phonebook ⇒ "Add entry" ⇒ enter Name ⇒ enter number ⇒ stored
View weather forecast	menu ⇒ Weather ⇒ Forecast ⇒ confirm
View T° & humidity	menu ⇒ weather ⇒ temperature 1 / 2 / 3 ⇒ confirm
Select Language	menu ⇒ handset menu ⇒ Language ⇒ select Language ⇒ confirm
Adjust earpiece volume	menu ⇒ handset menu ⇒ Ear volume ⇒ Select ⇒ confirm
Adjust ring volume	menu ⇒ Handset menu ⇒ Ring volume ⇒ Select ⇒ confirm
Adjust ring melody	menu ⇒ Handset menu ⇒ External Melody ⇒ Select melody ⇒ confirm
Search for remote sensor	Press and hold the [CHANNEL] button on base unit for 2 seconds to start searching for 3 minutes.
Turn off battery warning tone	menu ⇒ Handset menu ⇒ warning tone ⇒ Low battery ⇒ Select ON / OFF ⇒ confirm
Turn off auto-answer	menu ⇒ Handset menu ⇒ Auto Answer ⇒ Select ON / OFF ⇒ confirm * when auto-answer is 'off', press to answer a call