



## **DS8238**

Quick start guide  
Guide de mise en marche rapide  
Kurzübersicht  
Guida rápida  
Guía rápida  
Guia de começo rápido  
Snelle-start gids  
Snabbguide



**CE**

086-003006-037


DS8238 Q.S.Guide-8 langs. (086-003006-037)




2.0 Mega-Pixel Digital Camera (DS8238)  
 QUICK START GUIDE

### KEY FEATURES

#### FRONT VIEW

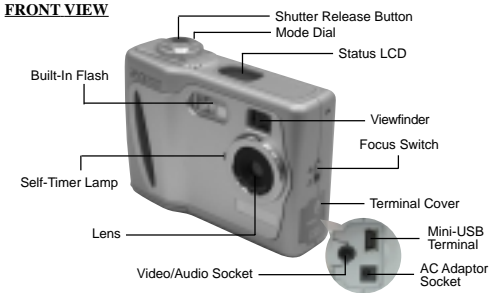


#### BACK VIEW

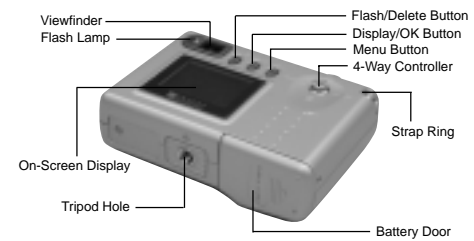


**MODE SWITCH**




**4-WAY CONTROLLER**

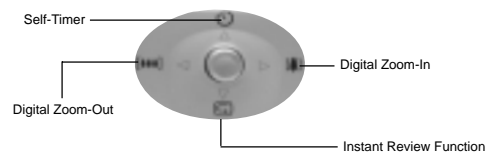

**LIQUID CRYSTAL DISPLAY**

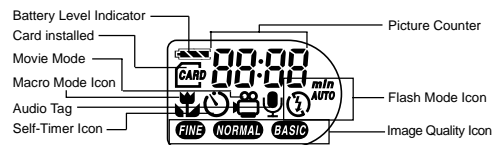


**BATTERY LEVEL INDICATOR**

 

**GETTING STARTED**


**Using 2 x AA Batteries**

Insert the batteries as shown on the compartment lid.

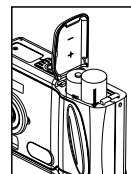

**Using CRV3 Battery**

Insert the battery with its polarity REVERSED.

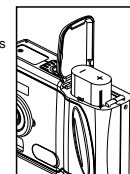

**SECURE DIGITAL (SD) AND MULTI-MEDIA CARD (MMC)**


**NOTE** It is recommended that all memory cards are formatted using the Format option before using them with this digital camera. Memory cards formatted using other devices may be incompatible.

**NOTE** When the SD card is installed, all images and movies taken are automatically stored on the card. Images and movies in the internal memory cannot be accessed until the card is removed.

⚠ The SD card will not insert fully into the slot if it is facing the wrong way. Be careful not to apply undue force to the card.


**Installing Secure Digital / Multi-Media Card**

1. Turn off the camera.
2. Open the battery door.
3. Insert the card following the printed remark.
4. Close the battery door.

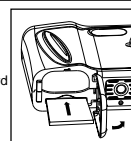

**Removing Secure Digital / Multi-Media Card**

1. Turn off the camera.
2. Open the battery door.
3. Press the card to release.
4. Close the battery door.

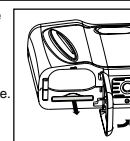


**Connecting to PC**



⚠ Please read and carefully follow the user manual for instructions on connecting the camera to your PC or macintosh.

**BASIC PHOTOGRAPHY****QUICK START****Preparing the camera**

1. Remove the lens cover from the lens.
2. Turn the Mode Dial to Camera Mode.
3. Check the battery indicator, making sure there is enough power.

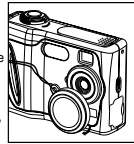**Holding the camera**

  1. Loop the strap over your wrist.
2. Hold the camera firmly.
3. Avoid blocking the lens and flash.
4. Do not move nor remain in motion while taking pictures. Use a tripod if necessary.

**Taking Basic Pictures**


1. Frame your subject in the viewfinder. The frame in the middle of the viewfinder indicates the zone of automatic focusing. You can also view the subject on the OSD.
2. Press the Shutter Release Button.
3. The image taken is displayed on the OSD for approximately a second (Auto Review).
4. Once the Auto Review has finished, you may proceed to take the next picture.

**(NOTE)** When memory is full, no more images can be stored. The camera will beep and the words "Internal Memory Full" will appear on the LCD if you press the Shutter Release Button.

**Shutting Off the Camera**

When you have finished taking your pictures:

1. Turn to Mode Dial to Off.
2. Place the lens cover securely over the lens.

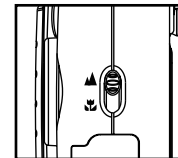**Selecting a Focus Mode**


Focus Options Table

Icon	Mode	Description
▲	Scene	This mode is used when the subject is far. The camera will focus on the subject in the viewfinder's frame when the Shutter Release Button is pressed halfway. Range: 1.5m to ∞.
🌸	Macro	This mode is used when the subject is near. Range: approx. 24cm.

**Selecting a Flash Mode****Initial Flash Settings**

 When you turn on your camera, the initial flash setting will vary depending on the level of your battery.

Battery Status	Initial Flash Setting
🔋 or 🔋	The flash setting is always on Auto at these battery levels when the mode switch changes to camera mode.
🔋 or 🔋	The initial flash setting is 🚫. However, you can manually set the flash to other settings.

**Toggling Between Flash Modes**

Flash Mode Options Table


Icon	Function	Description
🚫	Auto	The flash may discharge automatically, depending on the light conditions. The Flash Lamp lights red when this is selected.
🚫	Flash Off	The flash will not discharge. The Flash Lamp lights red when this is selected.
🔋	Flash On	The flash discharge regardless of lighting condition. The flash lamp lights green when this is selected.

ENGLISH

**Camera Mode On-Screen Display**



**Movie Mode On-Screen Display**

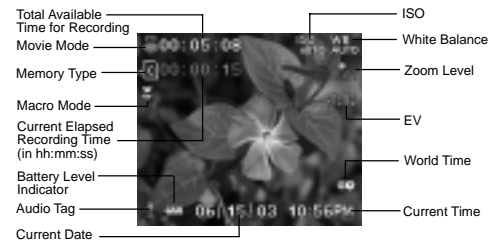

**Image Playback Mode On-Screen Display**



ENGLISH

**Movie Playback Mode On-Screen Display**

