Radio-Controlled Projection Clock with Colour Weather Forecast Model: BAR339P

0

1

USER MANUAL

CONTENTS

Introduction2
Clock overview2
Front view2
Back view2
Remote sensor3
Getting started3
Power supply3
Remote sensor3
Sensor data transmission4
Clock4
Clock reception4
Manually set clock5
Alarm5
Weather Forecast5
Temperature6
Projector and backlight6
Colour6

Key lock	7
Reset	7
Precautions	7
Specifications	8
About Oregon Scientific	8
EU-Declaration of conformity	8

INTRODUCTION

Thank you for selecting this Oregon Scientific[™] Radio-Controlled Projection Clock with Colour Weather Forecast. Please keep this manual for instructions and information you should know about.


CLOCK OVERVIEW



- 1. **SNOOZE**: Snooze alarm; activate backlight; rotate dual line projection display by 180°
- 2. ALARM: View alarm status; set alarm
- 3. CLOCK: Change display; set clock

- 4. ▼ / ▲ : Toggle setting options; activate / deactivate clock reception
- 5. TEMP: Toggle in / out temperature display
- 6. Projector (LED Aperture)

BACK VIEW

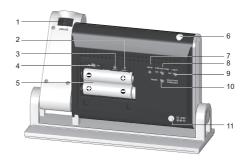

- 1. FOCUS: Focus the projected image
- 2. RESET: Reset settings to default
- 3. °C / °F: Select temperature unit
- 4. EU / UK: Radio signal switch
- 5. Battery compartment
- 6. Light sensor



- 7. **MEM**: View current, maximum and minimum temperature
- 8. PROJECTION: ON / OFF switch
- 9. LIGHT: Backlight ON / OFF switch
- 10. **DEMO WEATHER FORECAST**: Select between demo mode and weather forecast mode
- 11. Adapter socket REMOTE SENSOR

- 1. LED status indicator
- 2. Wall mount hole
- 3. Battery compartment
- 4. RESET hole: Reset unit to default settings
- 5. CHANNEL button: Select channel 1

GETTING STARTED

POWER SUPPLY

Batteries serve as a back-up power supply. For continuous use of projector and backlight, install adapter. The socket-outlet shall be installed near the equipment and shall be easily accessible.

NOTE W will appear when power supply is not connected.

To insert batteries:

- 1. Remove the battery compartment and insert batteries, matching polarities.
- 2. Press RESET after each battery change.

	MEANING
Clock / alarm area	Main unit batteries low
Outdoor / indoor temperature area	Sensor batteries low


REMOTE SENSOR

To set up the sensor:

- 1. Open the battery compartment, and insert batteries, matching polarities.
- 2. Place the sensor within 30 m (98 ft) of the main unit using the table stand or wall mount.



듧

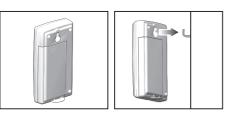

The transmission range may vary depending on many factors. You may need to experiment with various locations to get the best results.

NOTE We recommend that you use alkaline batteries with this product for longer usage and consumer grade lithium batteries in temperatures below freezing.

SENSOR DATA TRANSMISSION

Outdoor sensor:

The main unit will automatically search for the outdoor sensor. The sensor reception icon in the remote sensor area shows the status:

ICON	DESCRIPTION
இ வர→வர	Main unit is searching for sensor(s)
$\widehat{\operatorname{onl}} \to \widehat{\operatorname{onl}} \to \widehat{\operatorname{onl}} \to \widehat{\operatorname{onl}}$	A channel has been found
ωл	The sensor cannot be found.

NOTE If the sensor is not found, check the batteries, obstructions, and remote unit location.

For best results:

- Place the sensor out of direct sunlight and moisture.
- Position the sensor facing main unit, minimizing obstructions.
- Place the sensor in a location with a clear view to the sky, away from metallic or electronic objects.
- Position the sensor close to the main unit during cold winter months.

CLOCK

CLOCK RECEPTION

This product is designed to synchronize its clock automatically with a clock signal.

Slide EU / UK to select the signal received.

- EU: DCF-77 signal: within 1500 km (932 miles) of Frankfurt, Germany.
- UK: MSF-60 signal: within 1500 km (932 miles) of Anthorn, England.

To enable / disable signal reception:

Touch and hold \blacktriangle to enable, or \blacktriangledown to disable signal signal reception.

NOTE Reception takes 2-10 minutes. If the signal is weak, it can take up to 24 hours to get a valid signal.

Clock signal reception indicator:

STRONG	WEAK	NO
SIGNAL	SIGNAL	SIGNAL
Ś	С	ა

MANUALLY SET CLOCK

- 1. Touch and hold **CLOCK** for 2 seconds.
- Touch ▲ or ▼ to change the settings.
- 3. Touch CLOCK to confirm.
- The setting order is: time zone offset, 12/24-hr format, hour, minute, year, day / month format, month, day and language.

NOTE Time zone offset sets the clock +/- 23 hours from the received clock signal time.

NOTE The language options are (E) English, (D) German, (F) French, (I) Italian, and (S) Spanish.

To select display mode:

Touch **CLOCK** to choose between clock with seconds and clock with weekday.

ALARM

To set the alarm:

1. Touch and hold ALARM for 2 seconds to enter

alarm-setting mode.

- 2. Touch \blacktriangle / \blacktriangledown to set hour / minute.
- 3. Touch **ALARM** to confirm. **P** indicates alarm is ON.

To toggle alarms ON / OFF:

- 1. Touch ALARM to display alarm time.
- 2. Touch ALARM again to turn alarm ON / OFF.

To silence the alarms:

- Touch SNOOZE to silence it for 8 minutes
 OR
- Touch any other key to turn the alarm off and activate it again after 24 hours.

WEATHER FORCAST

It will forecast the next 12 to 24 hours of weather within a 30-50 km (19-31 mile) radius using different colour icons.

ICON	COLOUR	DESCRIPTION
-Ò-	Red / Orange	Sunny
0,D	Pink	Partially Cloudy
60	Turquoise	Cloudy
	Purple	Rainy
****	Green	Snowy



TEMPERATURE

To toggle temperature unit: Press °C / °F.

To toggle between outdoor / indoor sensor readings: Touch TEMP. (m) / (m) indicates indoor and outdoor temperature.

To auto-scan between sensors:

Touch and hold **TEMP** for 2 seconds to display the sensor's data for 5 seconds.

To deactivate auto-scan function touch TEMP.

To toggle between current, minimum and maximum temperature records for outdoor / indoor: Press MEM repeatedly.

To clear the records: Press and hold **MEM** for 2 seconds.

PROJECTOR AND BACKLIGHT

To activate Projection function:

Slide **PROJECTON** switch to **ON** to illuminate projection continuously.

To activate Backlight function:

Slide LIGHT switch to ON to illuminate backlight continuously.

OR

 Touch SNOOZE to turn on projector and backlight for 5 seconds. Touch repeatedly to flip dual line projection image by 180 degrees.

NOTE If projection is illuminated, do not look directly into the projector.



NOTE To save battery life, the projector and backlight will only operate continuously when adapter is installed. The light sensor will turn off the projector automatically when it detects external light sources.

COLOUR

The colour function lights up the LCD screen. There are 2 different types of display:

- WEATHER FORECAST: The colour changes according to the different weather forecast. (As shown in Weather forecast).
- DEMO: The colour gradually changes between the colours (rainbow display).



To activate / deactivate the weather forecast or rainbow display, slide the relevant switch to one of the following options:

- WEATHER FORECAST: Colour changing weather forecast.
- · DEMO: For gradual changes between the colours.

KEY LOCK

Auto key lock will activate if no key is pressed for 1 minute. On indicates key lock is engaged, touch any key to unlock.

RESET

Press RESET to return to the default settings.

PRECAUTIONS

- Do not subject the unit to excessive force, shock, dust, temperature or humidity.
- Do not cover the ventilation holes with any items such as newspapers, curtains etc.
- Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.
- Do not clean the unit with abrasive or corrosive materials.
- Do not tamper with the unit's internal components. This invalidates the warranty.
- Only use fresh batteries. Do not mix new and old batteries.

- Images shown in this manual may differ from the actual display.
- When disposing of this product, ensure it is collected separately for special treatment.
- Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific will not be responsible. Consult the furniture manufacture's care instructions for information.
- The contents of this manual may not be reproduced without the permission of the manufacturer.
- Do not dispose old batteries as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.
- Please note that some units are equipped with a battery safety strip. Remove the strip from the battery compartment before first use.

NOTE The technical specifications for this product and the contents of the user manual are subject to change without notice.

SPECIFICATIONS

TYPE	DESCRIPTION	
MAIN UNIT		
LxWxH	177 x 56 x 112 mm (6.97 x 2.21 x 4.41 in)	
Weight	340 g (12.0 oz) without battery	
Temperature Unit	°C / °F	
Temperature range	-5°C to 50°C (23°F to 122°F)	
Resolution	0.1°C (0.2°F)	
Signal frequency	433 MHz	
Power	3 x UM-3 (AA) 1.5 V batteries / 4.5V AC / DC adapter	
REMOTE UNIT (THN132N / THN132NH)		
LxWxH	92 x 60 x 20 mm (3.6 x 2.4 x 0.8 in)	
Weight	62 g (2.2 oz)	
Transmission range	30 m (98 ft) unobstructed	
Temperature range	-30°C to 60°C	
	(-22°F to 140°F)	
Power	1 x UM-3 (AA) 1.5 V battery	

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit:

www2.oregonscientific.com/service/support

OR

Call 1-800-853-8883.

For international inquiries, please visit: www2.oregonscientific.com/about/international

EU-DECLARATION OF CONFORMITY

Hereby, Oregon Scientific, declares that this Radio-Controlled Projection Clock with Colour Weather Forecast (Model: BAR339P) is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.

> COUNTRIES RTTE APPROVAL COMPLIED All EU countries, Switzerland (EH) and Norway (N)

S C I E N T I F I C

Radio-controlled Projection Clock with Colour Weather Forecast Model: BAR339P

USER MANUAL

(





© 2007 Oregon Scientific. All rights reserved. 086L004766-034

BAR339P_M_EN_R1.indd 10



۲

()